

# Index

## Numerics

16 levels .....	9-34
16384 colors .....	9-34
256 colors .....	9-34
3-speed blink .....	9-34
4096 colors .....	9-34
65536 colors .....	9-34

## A

address	
symbols .....	5-49
address action .....	25-94
address block conversion .....	5-90
address block display .....	17-19
address conversion pattern, changing device type using . 7-22	
address list	
confirm .....	5-29
display .....	5-30
address settings .....	5-99
addresses	
converting multiple .....	5-37
alarm .....	19-1
backup history .....	19-69
bit monitoring .....	19-20
direct selection .....	19-103
feature list .....	19-149
freeze mode .....	19-118
group .....	19-72
history .....	19-19, 19-30
list view .....	19-13
parts .....	19-89
printing history .....	19-143
settings .....	19-63
space requirements for history data .....	19-73
summary .....	19-72, 19-122
text .....	19-148
word monitoring .....	19-24
alarm file	
location .....	19-59
name .....	19-59
alarm history data .....	25-30
alarm language, changing .....	15-66
alarms	
displaying, scripts .....	20-17
align	
center .....	15-64, 15-65
fixed position .....	15-63
rows .....	15-63, 15-64, 15-65
API communication .....	37-161
application, triggering .....	21-67
attributes, change .....	5-64
attributes, changing .....	9-30

## B

backlight color settings .....	5-156
backup data, create .....	33-37
backup SRAM .....	19-73
backup SRAM capacity .....	5-84
banner display .....	19-72
bar code reader .....	8-2, 8-4
base screen, change .....	19-35
basic operations .....	5-1
bit logic system variables .....	A-85
bit operation examples .....	21-97
bit states	
16 .....	13-13, 13-23
5 .....	13-8
blink, setting up .....	9-37
blue-mode monochrome LCD .....	9-34
BMP/JPEG, pasting .....	9-64
buzzer .....	26-1, 26-7, 26-10

## C

call and display pictures .....	10-4, 10-11, 10-17
call screen .....	9-50, 9-51
calling a function .....	20-59
caution for saving to storage devices .....	19-61
CF Card	
cautions for saving to .....	24-136
cautions for use .....	5-169
copy to .....	33-29
handling precautions .....	24-137
initialize .....	33-37, 33-43
output folder .....	5-85
save cautions .....	5-168
setting folder .....	5-43
transfer project files using .....	33-36
CF Card Connection .....	33-28
CF card handling precautions .....	19-61
CF Card to USB memory .....	A-77
CF Card usage warnings .....	12-25
CF Card, handling precautions .....	25-117
CF file operation .....	21-35
change view .....	5-162
character code	
list, displaying characters not available in .....	9-76
table .....	9-72
character codes .....	6-6
clear area .....	16-26, 16-41
color	
codes .....	10-50
combinations .....	10-48
fill .....	9-10, 9-13, 9-15, 9-17, 9-22
palette .....	9-36
color code table .....	A-62
colors	
list of available .....	9-34
setting .....	9-34

command and status .....	19-58
command list .....	21-100
commands .....	21-1
common setting .....	5-101
common settings .....	5-155
communicating with multiple devices/PLCs .....	7-1
communication	
cycle time .....	A-21
error code .....	A-21
overview .....	A-2
communication state, confirming .....	7-14
compare memory .....	21-9
compare projects .....	33-25
comparison, conditions .....	21-75
compatibility .....	2-2
condition action .....	25-91
Condition Name Search Feature .....	25-100
conditional	
branch calculation examples .....	21-98
expressions .....	21-70
conditional expressions .....	20-48
control word address for data saving to storage device ..	
19-58	
conversion	
devices before and after .....	2-6
model names before and after .....	2-2
convert projects .....	2-2
coordinates, changing .....	9-33
copy memory .....	21-11, 21-14
copy tool .....	37-171
copying from other projects .....	5-94
creating reports .....	34-3
cross reference .....	5-93
cross references .....	5-30
CSV data	
display .....	25-81
displaying .....	25-30, 25-36
editing .....	25-40
flow .....	25-4
printing .....	25-41
transfer .....	25-56, 25-61, 25-89
CSV file, reading .....	21-51
CSV format .....	25-30
cursor shape .....	19-120

## D

data	
add .....	11-10
buffer to internal device .....	21-87
changing values .....	14-37
comparison .....	11-13
display .....	14-1, 14-42
input .....	14-1
range, prevent entering data outside allowed ..	
14-29	
store mode .....	21-42
subtract .....	11-10
write .....	11-8
data block display	

displaying/clearing a graph .....	17-22
Data Block Display graph mechanism .....	17-59
data blocks, copying .....	20-12
data capacity per screen .....	5-165
data sampling .....	24-1
date/time display .....	14-101
debug function .....	21-65
debugging projects .....	34-3
default screen display on GP power up, choosing ...	
12-7	
delay feature .....	11-71
delete file .....	21-57
Device Access API .....	37-90, 37-170
device monitor .....	A-41
device/PLC .....	5-142
device/PLC series settings .....	5-80
device/PLC system data area allocation .....	A-22
device/PLC, changing .....	7-17, 7-28
direct access and memory link, using together .....	A-37
direct access method .....	7-7, 7-9, 12-24, A-4
direct access method plus memory link method 7-8, 7-10	
display alarm message (banner) position .....	19-8
display historical data .....	17-51
display position point .....	10-10
display scan time .....	A-21, A-36
display settings .....	5-78
display system settings .....	5-111
display unit settings .....	5-112
displayed text, changing .....	15-8
double touch .....	11-24
download from external storage .....	33-36
DRAM .....	24-101
draw .....	9-1
drawing	
arcs/pies .....	9-14
by pixels .....	9-6
circles/ovals .....	9-11
line/polyline .....	9-7
polygons .....	9-16
rectangles .....	9-8
scales .....	9-18
tables .....	9-20
drawing using other languages .....	A-68
D-Scripts .....	20-2

## E

Enable System Data Area .....	12-11, 12-16, 18-20
enable system data area .....	26-9, 26-12
error check .....	5-96
event recorder .....	27-22, 27-84
example system environment .....	1-4
external operation from multiple GPs .....	19-146

## F

File Manager	
moving .....	25-39
overview .....	25-86
file name, changing .....	21-49
filing data .....	25-46, 25-52

capacity .....	25-110
flow .....	25-5
transfer .....	25-108
fixed pin .....	9-49
fixed pins, display .....	9-80
fixing/unfixing object position .....	9-49
font settings .....	6-19
font types .....	6-2, 6-4
fonts, adding/deleting .....	6-5
forced screen switching .....	A-14, A-28
free space on storage device .....	12-24
function name .....	20-65

## G

global D-Scripts .....	20-2
Global Window .....	18-4, 18-14
GP to PC	
receiving project files .....	33-9, 33-18
GP-Pro EX .....	1-2
GP-PRO/PBIII for Windows .....	2-2
graph	
data block display .....	17-55
historical trend .....	17-40
meter .....	17-36
normal .....	17-25
part settings .....	17-24
statistical .....	17-34
grids, setting up .....	9-57
group function .....	11-72
Group Number function .....	14-114
Guide Display .....	9-79

## H

Handling API .....	37-79, 37-170
header/footer .....	5-57
hierarchical screen change .....	12-20
historic data .....	17-15
HMI system variables (#H system variables) .....	A-102

## I

image fonts .....	6-15
image registration .....	10-23
index file .....	25-101
initialize memory .....	21-21, 21-22
input	
permitting .....	14-57, 14-61, 14-89, 14-93
sequential .....	14-33
input code table .....	9-76
input equipment settings .....	8-21
Input Order function .....	14-113
instructions, inserting .....	29-47
integer logic system variables .....	A-89
interlock .....	11-15
interlock touch action control .....	14-25
internal device address .....	A-5, A-7
internal device to data buffer .....	21-85
IPC Settings .....	37-155

## J

Japanese FEP .....	16-42
JPEG file of screen capture .....	12-17

## K

keep transfer .....	29-75
keypad	
creating .....	16-10
packages of .....	16-36
popup .....	16-3, 16-39
registration .....	16-23
setup .....	16-3, 16-7
system .....	16-21
user .....	16-22
keys .....	16-27

## L

ladder monitor .....	A-42
lamp settings .....	13-30
language	
change settings .....	15-53
changing .....	15-16, 15-23
line chart .....	17-11, 17-15, 24-14
line types, setting .....	9-37
Local Window .....	18-4, 18-7
logic editor .....	29-99
logic memory, confirming .....	29-112
logic monitor, starting and stopping .....	29-90
logic operation examples .....	21-96
logic program, correcting errors .....	29-83
logic system variables (#L system variables) .....	A-85
loop feature .....	12-24
loop function .....	25-107
LS area .....	A-9

## M

main window .....	5-75
mark registration .....	9-81, 9-83
mark restrictions .....	9-85
Marks, display image created with .....	9-66
memory	
operation .....	21-7
ring .....	21-15
memory link method .....	12-24, A-6
Memory Loader .....	33-63
memory loader .....	33-36
Message Display .....	19-135
message display .....	15-37
messages (text), changing and displaying .....	15-4
monochrome	
16 levels .....	9-34
LCD .....	9-34
move range and move direction .....	10-22
movie	
converting files .....	27-41
saving to CF card .....	27-13
saving to FTP server .....	27-16
selecting at run time .....	27-33

using file manager to play .....	27-38
moving picture .....	10-17
moving the file manager .....	27-40
multi-function .....	11-32
multifunction feature .....	11-72
multilanguage .....	15-16, 15-23

## N

number of features per screen .....	5-165
numbering, automatic .....	25-106
numeric display .....	14-44

## O

### objects

aligning .....	9-32
duplicating .....	9-28
editing .....	9-26
enlarging/reducing .....	9-27
grouping .....	9-31
moving .....	9-28
reversing .....	9-33
rotating .....	9-32
ungrouping .....	9-31
offset address calculation examples .....	21-99
online edit .....	29-83
online monitor .....	29-77
online update .....	2-21
operand settings .....	29-58
operating environment .....	3-3, 3-4
operation example .....	21-96
operation results .....	20-66
operator .....	21-77
option settings .....	5-147
output file list .....	21-56
overlapping pictures .....	10-8, 10-13

## P

package contents .....	3-2
package registration .....	9-85
parameter for read/write .....	37-93
part ID, display .....	9-80
Part Palette .....	9-41
Parts Toolbox .....	5-77
parts, editing .....	9-38
password .....	33-31
password input window .....	22-7
passwords .....	5-25, 5-86, 5-88, 22-1
editing .....	5-26
remove/change .....	33-34
patterns, setting .....	9-37
PC project simulation .....	32-1
PC to GP	
sending project files .....	33-6, 33-13
using modem to transfer screen data .....	33-49
pen recorder .....	17-42
Peripheral List .....	5-139
Picture Display .....	19-134
picture display .....	10-25

pictures .....	9-6
placing pictures registered in package .....	9-53
play list	
creating file .....	27-26
using .....	27-26
position point, display .....	10-16, 10-51
print	
batch .....	19-66
cancel .....	34-23
current screen .....	34-13
feature .....	34-10
format .....	19-67
introduction .....	34-3
layout .....	34-7
project settings .....	34-33
real-time .....	19-66
rich text file, format .....	34-3
printer	
configuring .....	34-11
connecting .....	34-8, 34-10
types of .....	34-9
printer operation .....	21-59
processing .....	14-81
programming D-Scripts .....	20-2
project converter .....	2-11
project files	
backup .....	5-20
create .....	5-7
setup .....	5-7
project information .....	5-41
project simulation on PC .....	32-1
properties .....	5-81, 5-105
Pro-Server EX .....	37-11

## R

read area, internal device .....	17-59
read file .....	21-54
real-time images, displaying .....	27-8
receiving data .....	33-67
recipes	
CSV data .....	25-9, 25-17, 25-25
CSV format .....	25-9
data .....	25-30
data, transfer .....	25-63
filing data .....	25-42
overview .....	25-2
save to CF card .....	25-10
settings .....	25-56
transfer .....	25-67
transfer CSV data .....	25-3
transfer filing data .....	25-3
Reflect in Device/PLC .....	12-15
registering	
new part images .....	9-45
pictures in package .....	9-55
screen as template .....	9-62
registering addresses .....	29-13
Remote PC Access (RPA)	

input .....	36-20	scrolling alarm messages .....	19-6
window display .....	36-16	search .....	5-71
replace .....	5-71	search and replace .....	5-71
resolution, convert .....	5-94, 5-112	search memory .....	21-18
RPA (Remote PC Access)		security	
key code .....	36-4	level list .....	22-11
overview .....	36-2	passwords .....	22-1
VNC server, installing .....	36-2	settings .....	22-9
rungs and branching, inserting .....	29-39	select screen from templates .....	9-60
<b>S</b>		sending data .....	33-66
sampled data .....	25-30	shift memory .....	21-23
sampling		show address .....	9-80
CSV format .....	24-20	Show Grid .....	9-80
data .....	24-14	show history .....	19-90
data display .....	24-93, 24-116	show limit value .....	14-108
data storage methods .....	24-112	Show Ruler .....	9-80
data, timing .....	24-104	show scale .....	17-62
display format of data .....	24-30	show text window .....	19-42
group list .....	24-37	simulation on PC .....	32-1
if data cannot be sampled .....	24-120	SIO port operation .....	21-25
overview .....	24-2	SIO port operations .....	20-62
saving data to CF Card .....	24-20	Snap to Grid .....	9-79
structure .....	24-99	sound .....	26-1, 26-13
usage capacity of data .....	24-101	sound options .....	11-46
sampling settings .....	17-11	speaker .....	26-3
saving		Special Data Display .....	25-71
alarm history .....	19-54	special relay .....	A-19, A-34
CSV format .....	19-54	SRAM auto backup .....	5-171
to CF Card/USB storage .....	19-57	SRAM backup .....	24-100
saving to CF Card .....	12-17	SRAM backup, about .....	25-109
screen capture .....	5-171, 12-17, 12-24	standard font .....	6-3
screen colors, changing .....	5-63	state list .....	11-49
screen data list window .....	5-106	statistical data display .....	14-104
screen display, turning off .....	35-8, 35-10	STN color LCD .....	9-34
screen information .....	5-161	stop communications .....	7-12
screen list .....	5-103	stroke font .....	6-3
screen saver .....	35-1, 35-8	sub display	
screens		help .....	19-34
copying .....	5-66	using global window .....	19-136
saving displayed .....	12-17	using local window .....	19-136
screens, changing .....	12-4, 12-9, 12-12, 12-20	supported functions, list by device .....	1-5
script		supported models .....	3-7
commands .....	21-1	switch	
programming .....	21-1	bit .....	11-41
script I/O settings .....	5-145	Change Screen .....	11-58
scripts		color-changing .....	11-27
creating .....	20-23	label .....	11-51
creating global .....	20-41	radio .....	11-34
error code list .....	20-67	Selector .....	11-69
extended .....	20-2	Special .....	11-59
extended, structure of .....	20-22	Word .....	11-54
function summary .....	20-27	Switch Lamp .....	11-38
Global D-Script .....	20-53	switches .....	11-1
main function .....	20-27	symbol variable .....	5-158
operation .....	20-5	symbol variables, importing/exporting .....	29-26
printing from .....	20-21	system	
programming .....	20-59	area .....	A-25
		data area .....	A-11, A-26

variables .....	A-84
system data area .....	7-9
system settings .....	5-97
system settings window .....	5-111

## T

template registration .....	5-163
text	
display area .....	15-63, 15-64, 15-65
operation .....	21-80
operation error status .....	21-89
registration .....	15-49
table settings .....	15-51
text alarm .....	19-126
Text Data Mode .....	5-143
text display .....	14-84
text settings .....	9-77
text table .....	15-16, 15-23, 15-31, 15-36
TFT color LCD .....	9-34
time schedule .....	23-1, 23-11
time, adjusting .....	35-1, 35-4
time-base .....	14-72
toolbar, customizing .....	29-6
touch areas, display .....	9-80
transfer project files .....	33-6
transfer settings .....	33-59
Transfer Tool .....	33-57
installation requirements .....	3-6
installing .....	33-68
transfer via Ethernet (LAN) .....	33-12
transfer via USB cable .....	33-5
trigger action .....	A-53
trigger condition .....	20-46
two-dimensional code reader .....	8-4, 8-12

## U

Ultra VNC Server, RPA .....	36-7
upload to external storage .....	33-36, 33-43
usable address .....	A-4, A-7
USB memory to CF Card .....	A-77
USB storage handling instructions .....	24-137
user-defined functions	
creating .....	20-58
setup of .....	20-44
utility settings .....	5-90

## V

VB.NET 2003 Program .....	37-57
Video .....	27-1
video	
before and after malfunction .....	27-20
recording .....	27-1
Video Control Area, example use of .....	27-132
View Addresses in the Address Map .....	5-32
VNC server, RPA .....	36-7

## W

window frame .....	37-162
--------------------	--------

Window Part .....	18-21
Window Screen .....	19-136
windows	
changing displayed .....	18-11, 18-17
creating .....	18-4
displaying .....	18-7
displaying multiple on single screen .....	18-30
Windows XP Embedded .....	37-11
WinGP .....	37-2
API .....	37-34
executing the application .....	37-71
handling API .....	37-56
license key code .....	37-2
Prohibit Double Calling API .....	37-120
read or write data .....	37-38
Reading Text in VB .....	37-121
SDK .....	37-13
starting .....	37-26
VB.Net 2003 Program Examples .....	37-39
VB6 Program Example .....	37-65
WinGP, exiting .....	21-69
work flow to start of operation .....	4-2, 4-3
work space .....	5-97
write to file .....	21-44
writing text .....	9-23
<b>X</b>	
XOR display .....	10-28, 10-47
<b>Z</b>	
Zoom Box .....	5-77