

Index

Numerics

16 levels	8-42
16384 colors	8-42
256 colors	8-42
3-speed blink	8-42
4096 colors	8-42
65536 colors	8-42

A

address action	24-96
address block conversion	5-101
address block display	18-25
address conversion pattern, changing device type using	7-24
Address Format	28-32
address list	
confirm	5-31
display	5-32
Address Monitor	28-105
Address Refresh	28-135
address settings	5-111
addresses	
converting multiple	5-40
alarm	19-1
backup history	19-78
bit monitoring	19-22
direct selection	19-120
feature list	19-166
freeze mode	19-136
group	19-81
history	19-21, 19-32
list view	19-15
parts	19-105
printing history	19-160
settings	19-72
space requirements for history data	19-82
summary	19-81, 19-140
text	19-165
word monitoring	19-26
alarm file	
location	19-61
name	19-61
alarm history data	24-31
alarm language, changing	17-69
alarm message display position	19-10
alarms	
displaying, scripts	20-17
align	
center	17-66, 17-67
fixed position	17-65
rows	17-65, 17-66, 17-68
API communication	37-163
application, triggering	20-141
attributes, change	5-68
attributes, changing	8-34

AUX output	10-50
------------------	-------

B

backlight color settings	5-176
backup	5-166
backup data, create	32-37
backup SRAM	19-82
backup SRAM capacity	5-94
banner display	19-81
barcode reader	16-2, 16-4
basic operations	5-1
bit logic system variables	A-97
bit operation examples	20-171
bit states	
16	13-13
5	13-8
blink, setting up	8-49
blue-mode monochrome LCD	8-42
BMP/JPEG, pasting	8-79
Branch	28-49
branch, inserting	28-42
buzzer	10-50, 25-1, 25-7, 25-10

C

call and display pictures	9-4, 9-10, 9-15
call screen	8-65, 8-66
calling a function	20-57
caution	
saving to storage devices	19-62
caution for saving to storage devices	23-147
CF Card	
cautions for use	5-189, 11-27, 23-148
copy to	32-29
destination folder	5-95
initialize	32-37, 32-42
save cautions	5-189
setting folder	5-46
transfer project files using	32-36
CF card	5-191
cautions for saving	23-147
cautions for use	19-62
CF card to USB memory	A-90
CF Card Tool	32-28
CF Card, handling precautions	24-118
CF card, save to	
caution	19-62
control word address	19-60
CF File Operation	20-107
change base screen	19-37
change screen	11-10, 11-13
change view	5-182
character code	
list, displaying characters not available in	8-96
table	8-92
character codes	6-6

clear area	15-27, 15-40	buffer to internal device	20-161
color		changing values	14-34
codes	9-50	comparison	10-16
combinations	9-48	display	14-1, 14-39
fill	8-11, 8-14, 8-17, 8-19, 8-25	input	14-1
color code table	A-73	range, prevent entering data outside allowed	14-28
color palette	8-45	store mode	20-115
colors		subtract	10-13
list of available	8-42	write	10-10
setting	8-42	data block display	
command and status	19-60	displaying/clearing a graph	18-28
Comment List	28-155	data block display graph structure	18-72
Comments	28-72	data blocks, copying	20-12
comments, search and replace	5-74	data capacity per screen	5-185
common setting	5-113	data sampling	23-1
common settings	5-175	date/time display	14-97
communicating with multiple devices/PLCs	7-1	debug function	20-139
communicating with multiple PLCs	7-1	debugging	33-4
communication		default screen display on GP power up, choosing ...	11-7
cycle time	A-25	delay feature	10-76
error code	A-25	delete file	20-131
overview	A-2	Device Access API	37-89, 37-173
communication state, confirming	7-15	device monitor	A-47
compare memory	20-79	device/PLC	5-161
Compare projects	32-25	device/PLC series settings	5-90
comparison, conditions	20-148	device/PLC system data area allocation	A-26
compatibility	2-2	device/PLC, changing	7-18, 7-29
condition action	24-93	direct access and memory link, using together	A-43
Condition Name Search Feature	24-101	direct access method	7-8, 7-10, 11-25, A-4
conditional		direct access method plus memory link method	7-9, 7-10
branch calculation examples	20-172	display historical data	18-61
expressions	20-144	display position point	9-9, 9-14
conditional expressions	20-46	display scan time	A-25, A-41
control word address, save to CF card	19-60	display settings	5-89
conversion		display system settings	5-128
devices before and after	2-6	display unit settings	5-130
model names before and after	2-2	displayed text, changing	17-8
convert	2-2	documenting	33-4
coordinates, changing	8-40	double touch	10-28
copy memory	20-82, 20-85	download from external storage	32-36
copy tool	37-174	DRAM	23-112
copying from other projects	5-105	draw	8-1
cross reference	5-104	drawing	
cross references	5-32	arcs/pies	8-16
CSV data		by pixels	8-7
display	24-83	circles/ovals	8-13
displaying	24-31, 24-37	line/polyline	8-8
editing	24-41	polygons	8-18
flow	24-4	rectangles	8-10
printing	24-42	scales	8-20
transfer	24-57, 24-62, 24-91	tables	8-23
CSV file, reading	20-124	drawing using other languages	A-79
CSV format	24-31	D-Scripts	20-2
cursor shape	19-138	D-scripts, global	20-2
D		E	
data		Enable System Data Area	11-12, 11-17, 12-20
add	10-13	enable system data area	25-9, 25-12

Error Check	5-107, 5-174
event recorder	26-22, 26-86
example system environment	1-4
Exit WinGP	37-26
external operation from multiple GPs	19-163

F

File Manager	
overview	24-88
file name, changing	20-122
filing data	
capacity	24-111
flow	24-5
transfer	24-109
transferring	24-47, 24-53
fixed pin	5-118, 8-41
font settings	6-18
font types	6-2, 6-4
fonts, adding/deleting	6-5
forced screen switching	A-13, A-17, A-33
free space on storage device	11-26
FTP server	5-191
function name	20-63

G

global D-Scripts	20-2
global interlock	21-10, 21-25
Global Window	12-4, 12-14
GP to PC	
receiving project files	32-9, 32-18
GP-Pro EX	1-2
GP-PRO/PBIII for Windows	2-2
graph	
data block display	18-68
historical trend	18-46
meter	18-42
normal	18-31
part settings	18-30
statistical	18-40
grids, setting up	8-72
group function	10-77
Group Number function	14-111
Guard Time	30-218

H

Handling API	37-173
handling API	37-79
header/footer	5-61
hierarchical screen change	11-21
historic data	18-15
HMI system variables (#H system variables)	A-116

I

image fonts	6-14
image registration	9-20
index file	24-102
initialize memory	20-92, 20-93
input	

enable	14-54, 14-58, 14-86
permitting	14-90
sequential	14-31
input code table	8-96
input equipment settings	16-24
input order function	14-110
Insert Ladder Instructions	28-51
Instructions/Conditional Expressions	20-66
integer logic system variables	A-101
interlock	10-19
Interlock Settings	21-24
interlock touch action control	14-24
internal device address	A-5, A-8
internal device to data buffer	20-159
IPC Settings	37-156

J

Japanese FEP	15-41
JPEG file, screen capture	11-18

K

kanji conversion	15-29, 15-41
keep transfer	28-84
keypad	
pop-up	15-3, 15-38
registration	15-24
setup	15-3, 15-6
system	15-21
user	15-23
user-created	15-9
keys	15-28

L

Label	28-63
labels, search and replace	5-74
Ladder Instructions	28-51
Ladder instructions	28-115
Ladder Instructions Icon List	28-8
ladder monitor	A-49
lamp settings	13-33
language	5-166
change settings	17-56
changing	17-16, 17-25
Lifetime factor	30-218
line chart	18-11, 18-15, 23-14
line types, setting	8-50
Local Window	12-4, 12-7
Logic Memory	28-124
Logic Monitor	28-102
logic monitor, starting and stopping	28-100
logic operation examples	20-170
logic program, correcting errors	28-86
logic system variables (#L system variables)	A-97
loop feature	11-26
loop function	24-108
LS area	A-9

M	
main window	5-85
mark registration	8-104, 8-105
mark restrictions	8-107
Marks, display image created with	8-85
memory	
operation	20-76
ring	20-86
memory link method	11-25, A-7
Memory Loader	32-63
memory loader	32-36
Memory Restriction	28-126
Message Display	19-152
message display	17-39
messages (text), changing and displaying	17-4
Monitor step	5-172
monochrome	
16 levels	8-42
LCD	8-42
move range and move direction	9-19
movie	
converting files	26-41
saving to CF card	26-13
saving to FTP server	26-16
selecting at run time	26-33
using file manager to play	26-38
moving picture	9-15
moving the file manager	24-40, 26-40
multi-function	10-36
multifunction feature	10-77
multilanguage	17-16, 17-25
N	
name of each part of the screen	5-85
number of features per screen	5-185
Number of Retentive/Volatile	28-17
numbering, automatic	24-107
numeric display	14-41
O	
objects	
aligning	8-37
duplicating	8-32
editing	8-29
enlarging/reducing	8-31
grouping	8-35
moving	8-31
reversing	8-39
rotating	8-38
ungrouping	8-35
offset address calculation examples	20-173
one shot	10-50
Online Edit	28-95
Online Monitor	28-88
online update	2-21
online updates	
setting	5-166
Operand	28-5, 28-66
operand	5-171
Operand Settings	28-66
operating environment	3-3
operation example	20-170
operation results	20-64
operation scheduling	22-1
operator	20-150
option settings	5-166
output file list	20-129
overlapping pictures	9-8, 9-11
P	
package contents	3-2
package registration	8-107
parameter for read/write	37-92
part name, logic screen	28-5
Part Palette	8-55
Parts Toolbox	5-87
parts, editing	8-52
parts, search and replace addresses	5-74
password	28-138, 32-31
passwords	5-27, 5-96, 5-97
editing	5-28
remove/change	32-34
patterns, setting	8-51
PC project simulation	31-1
PC to GP	
sending project files	32-6, 32-13
using modem to transfer screen data	32-48
pen recorder	18-48
Peripheral List	5-158
Picture Display	19-151
picture display	9-22
pictures	8-6
PID Monitor	28-156
placing pictures registered in package	8-68
play list	
creating file	26-26
using	26-26
PLC	
communicating with multiple	7-1
PLC, connecting multiple	7-8
position point, display	9-51
preview	5-17
print	
batch	19-75
cancel	33-30
current screen	33-20
introduction	33-4
layout	33-8
project settings	33-40
real-time	19-75
print format	19-76
printer	
configuring	33-14, 33-18
connecting	33-12
printer operation	20-133
printer types	33-11

printing features	33-12
processing	14-78
programming D-Scripts	20-2
project converter	2-11
project files	
backup	5-23
create	5-9
setup	5-9
project information	
viewing	5-44
project simulation on PC	31-1
properties	5-91, 5-118
Pro-Server EX	37-11
protecting objects	8-41
Pulse	28-71

R

read area, internal device	18-73
read file	20-127
real-time video	26-8
receiving data	32-67
recipes	
CSV data	24-10, 24-18, 24-26
CSV format	24-10
data	24-31
data, transfer	24-64
filing data	24-43
overview	24-2
save to CF card	24-11
settings	24-57
transfer	24-68
transfer CSV data	24-3
transfer filing data	24-3
transferring	24-47, 24-53
Reflect in Device/PLC	11-17
registering	
pictures in package	8-70
screen as template	8-77
registering addresses	28-13
Remote PC Access	
key code	35-4
overview	35-2
VNC server, installing	35-2
Remote PC Access (RPA)	
input	35-29
window display	35-23
replace	5-74
resolution, convert	5-105, 5-129
Restriction Number of Logic Program	28-126
Retentive Area	28-17
rich text file	33-4
rung, inserting	28-42

S

sampled data	24-31
sampling	
CSV format	23-20
data	23-14

data display	23-126
data storage methods	23-122
data, timing	23-115
display format of data	23-30
group list	23-37
if data cannot be sampled	23-130
overview	23-2
saving data to CF Card	23-20
structure	23-110
usage capacity of data	23-112
Sampling Data Display	23-104
sampling settings	18-11
save to	
CF card	19-60
CF card, caution	19-62
USB storage, caution	19-62
saving	
alarm history	19-56
CSV format	19-56
saving to	
CF card or USB storage	19-59
saving to CF Card	11-18
Scan Time	28-128, 28-131, 28-161
schedule	22-1
screen capture	5-192, 11-18, 11-26
screen capture, JPEG file	11-18
screen colors, changing	5-67
screen data list window	5-119
screen display, turning off	34-8, 34-10
screen information	5-181
screen list	5-116
screen saver	34-1, 34-8
screens	
copying	5-70
saving displayed	11-18
screens, changing	11-4, 11-10, 11-13, 11-21
script	5-167
script I/O settings	5-164
scripts	
creating	20-23
creating global	20-39
error code list	20-65
extended	20-2
extended, structure of	20-22
function summary	20-27
Global D-Script	20-51
main function	20-27
operation	20-5
printing from	20-21
programming	20-57
scrolling alarm messages	19-8
search	5-120
search and replace	5-74
search memory	20-88
security	28-138
security level list	21-23
security settings	21-19
select screen from templates	8-75

sending data	32-66	system settings window	5-128
shift memory	20-94	System Variable	28-41
show address	8-103	System Variables	28-14
Show Grid	8-102	T	
show history	19-106	template registration	5-183
show limit value	14-105	text	
Show Ruler	8-103	display area	17-65, 17-66, 17-67
show scale	18-75	operation	20-154
show text window	19-44	operation error status	20-163
simulation on PC	31-1	registration	17-52
SIO port operation	20-97	table settings	17-54
SIO port operations	20-59	text alarm	19-144
Snap to Grid	8-102	Text Data Mode	5-162
sound	25-1, 25-13	text display	14-81
sound options	10-50	text settings	8-97
speaker	25-3	text table	17-16, 17-25, 17-33, 17-38
Special Data Display	24-72	TFT color LCD	8-42
special relay	A-23, A-39	time schedule	22-1, 22-11
SRAM	19-82	time, adjusting	34-1, 34-4
SRAM backup	23-111	time-base	14-69
SRAM backup, about	24-110	toolbar, customizing	28-6
SRAM, precautions	5-192	touch, double	10-28
standard font	6-3	transfer	
state list	10-53	recipes	24-47, 24-53
statistical data display	14-100	transfer project files	32-6
Steps	28-5	transfer settings	32-59
STN color LCD	8-42	Transfer Tool	32-56
stop communications	7-13	installation requirements	3-5
stroke font	6-3	installing	32-68
sub display		transfer via Ethernet (LAN)	32-12
help	19-36	transfer via USB cable	32-5
using global window	19-153	transparent parts	10-43, 14-40, 18-30
using local window	19-153	trigger action	A-61
Subrouting	28-59	trigger condition	20-44
supported functions, list by device	1-5	two-dimensional code reader	16-4, 16-11
supported models	3-6	U	
switch		Ultra VNC Server, RPA	35-7
bit	10-45	upload to external storage	32-36, 32-42
Change Screen	10-63	usable address	A-4, A-8
color-changing	10-31	USB memory to CF card	A-90
label	10-55	USB storage	5-190, 5-191
radio	10-38	cautions for saving	23-147
Selector	10-74	USB storage handling instructions	23-148
Special	10-64	USB storage, save to	
Word	10-59	caution	19-62
Switch Lamp	10-42	user-defined functions	
switches	10-1	creating	20-56
Symbol	28-14	setup of	20-42
symbol	5-52	using logic	28-3
Symbol Variable	28-14, 28-126	utility settings	5-101
symbol variable	5-178	V	
symbol variables, importing/exporting	28-28	Variable	28-14
system		Variable format	28-20
area	A-29	VB.NET 2003 Program	37-57
data area	A-11, A-31	Verification method for Logic Memory	28-124
variables	A-96		
system data area	7-10		
system settings	5-109		

Video	26-1
video	
before and after malfunction	26-20
recording	26-1
Video Control Area, example use of	26-136
View Addresses in the Address Map	5-35
VNC server, RPA	35-7

W

Watch List	28-160
window frame	37-164
Window Part	12-21
Window Screen	19-153
windows	
changing	12-11
changing displayed	12-17
creating	12-4
displaying	12-7
displaying multiple on single screen	12-31
Windows XP Embedded	37-11
WinGP	37-2
API	37-34
handling API	37-56
license key code	37-2
Prohibit Double Calling API	37-121
read or write data	37-38
Reading Text in VB	37-122
running the application	37-71
SDK	37-13
starting	37-26
VB.Net 2003 Program Examples	37-39
VB6 Program Example	37-65
WinGP, exiting	20-143
work flow to start of operation	4-2, 4-3
work space	5-109
write to file	20-118
writing text	8-26

X

XOR display	9-26, 9-47
-------------------	------------

Z

Zoom Box	5-88
----------------	------

