

---

# Table of Contents

Preface .....	1
Trademark Rights .....	2
How To Use This Manual .....	3
Manual Symbols and Terminology .....	5
Instructions for Safe Use .....	7
Inquiry .....	8
<b>Contact Information 8</b>	
Table of Contents .....	9

## Chapter 1 Welcome to GP-Pro EX

---

1.1 About GP-Pro EX .....	1-2
1.1.1 Features .....	1-2
1.1.2 Main features of GP-Pro EX Version 2.0 or later .....	1-3
1.2 Model Environment .....	1-4
1.3 List of Supported Functions by Device .....	1-5
1.3.1 GP-3200 Series .....	1-5
1.3.2 GP-3300 Series .....	1-7
1.3.3 GP-3400 Series .....	1-10
1.3.4 GP-3500 Series .....	1-13
1.3.5 GP-3600/3700 Series .....	1-15
1.3.6 LT 3000 Series .....	1-18
1.3.7 IPC Series (PC/AT) .....	1-20

## Chapter 2 Using GP-Pro EX

---

2.1 Compatibility with Pro-face® Software .....	2-2
2.1.1 Compatible Software Versions .....	2-2
2.1.2 Model Names Before and After Conversion .....	2-2
2.1.3 Devices before and after Conversion .....	2-6
2.1.4 Using the Project Converter .....	2-11
2.1.5 Setting up the Project Converter .....	2-15
2.1.6 Error Messages .....	2-17
2.2 How to Update Software .....	2-21
2.2.1 Working with Online Update .....	2-21

## Chapter 3 Environment

---

3.1 Package Content .....	3-2
3.2 Operating Environment .....	3-3
3.2.1 GP-Pro EX Operating Environment Requirements .....	3-3
3.2.2 Transfer Tool Installation Requirements .....	3-5

3.3	Supported Model List .....	3-6
3.3.1	GP3000 Series .....	3-6
3.3.2	LT3000 Series .....	3-8
3.3.3	IPC Series (PC/AT) .....	3-8

## Chapter 4 Development Process

---

4.1	Creating HMI Displays .....	4-2
4.2	Creating HMI Displays and Logic Programs .....	4-3

## Chapter 5 Start to Finish

---

5.1	Settings Menu .....	5-2
5.2	Starting/Creating/Saving/Finishing .....	5-9
5.2.1	Introduction .....	5-9
5.2.2	Setup Procedure .....	5-10
5.3	Backing Up a Project File .....	5-23
5.3.1	Introduction .....	5-23
5.3.2	Setup Procedure .....	5-24
5.4	Entering a Password in a Project File .....	5-27
5.4.1	Introduction .....	5-27
5.4.2	Setup Procedure .....	5-28
5.5	Confirming the Address List Used in a Project File .....	5-31
5.5.1	Introduction .....	5-31
5.5.2	Setup Procedure .....	5-32
5.6	Converting Multiple Addresses .....	5-40
5.6.1	Introduction .....	5-40
5.6.2	Setup Procedure .....	5-41
5.7	Viewing the Project Information .....	5-44
5.7.1	Introduction .....	5-44
5.7.2	Setup Procedure .....	5-45
5.8	Copying a Screen from Another Project .....	5-48
5.8.1	Introduction .....	5-48
5.8.2	Setup Procedure .....	5-49
5.9	Registering Addresses with Comprehensive Names .....	5-52
5.9.1	Introduction .....	5-52
5.9.2	Setup Procedure .....	5-53
5.10	Using Headers and Footers on a Screen .....	5-61
5.10.1	Introduction .....	5-61
5.10.2	Setup Procedure .....	5-62
5.11	Changing the Screen Number/Title/Screen Color .....	5-67
5.11.1	Introduction .....	5-67
5.11.2	Setup Procedure .....	5-68
5.12	Copying/Deleting a Screen .....	5-70

5.12.1	Introduction .....	5-70
5.12.2	Setup Procedure .....	5-71
5.13	Searching/Replacing Parts Addresses, Labels, and Comments .....	5-74
5.13.1	Introduction .....	5-74
5.13.2	Setup Procedure .....	5-75
5.14	Changing Attributes of Parts in block .....	5-78
5.14.1	Details .....	5-78
5.14.2	Procedure .....	5-79
5.15	Settings Guide .....	5-85
5.15.1	Main Window Part Names .....	5-85
5.15.2	[New] Settings Guide .....	5-89
5.15.3	[Properties] Settings Guide .....	5-91
5.15.4	[Utility] Settings Guide .....	5-101
5.15.5	[Work Space] Settings Guide .....	5-109
5.15.6	[System Settings] Setting Guide .....	5-128
5.15.7	[Preferences] Settings Guide .....	5-166
5.15.8	[Common Settings] Setting Guide .....	5-175
5.15.9	[Screen] Settings Guide .....	5-179
5.16	Restrictions .....	5-184
5.16.1	Restrictions for Creating Screens .....	5-184
5.16.2	Restrictions on Saving Data .....	5-189

## Chapter 6 Font

---

6.1	Font Types .....	6-2
6.2	Defining Stroke Font and Standard Font .....	6-3
6.2.1	Introduction .....	6-3
6.2.2	Setup Procedure .....	6-11
6.3	Image Font .....	6-14
6.3.1	Introduction .....	6-14
6.3.2	Setup Procedure .....	6-15
6.4	[Font] Settings Guide .....	6-18
6.5	Restrictions .....	6-19
6.5.1	Restrictions for Standard Font .....	6-19
6.5.2	Restrictions for Image Font .....	6-19

## Chapter 7 Communicating with Multiple Devices/PLCs

---

7.1	Settings Menu .....	7-2
7.2	Connecting to Multiple Device/PLCs .....	7-3
7.2.1	Introduction .....	7-3
7.2.2	Setup Procedure .....	7-4
7.2.3	Structure .....	7-8
7.3	Disconnecting Multiple Connected Devices/PLCs .....	7-12

7.3.1	Introduction .....	7-12
7.3.2	Setup Procedure .....	7-12
7.4	Changing a Device/PLC .....	7-18
7.4.1	Introduction .....	7-18
7.4.2	Setup Procedure .....	7-19
7.5	Settings Guide .....	7-29
7.5.1	[Change Device/PLC] Settings Guide .....	7-29
7.5.2	[Address Conversion Method Specification] Settings Guide .....	7-31
7.6	Restrictions .....	7-35

## Chapter 8 Draw

### (Figures/Text)

8.1	Settings Menu .....	8-2
8.2	Drawing Pictures .....	8-6
8.2.1	Drawing Picture Lists .....	8-6
8.2.2	Drawing by Pixels .....	8-7
8.2.3	Drawing Line/Polyline .....	8-8
8.2.4	Drawing Rectangles .....	8-10
8.2.5	Drawing Circles/Ovals .....	8-13
8.2.6	Drawing Arcs/Pies .....	8-16
8.2.7	Drawing Polygons .....	8-18
8.2.8	Drawing Scales .....	8-20
8.2.9	Drawing Tables .....	8-23
8.3	Writing Text .....	8-26
8.3.1	Setup Procedure .....	8-26
8.4	Editing Objects .....	8-29
8.4.1	Introducing Edit Tools .....	8-29
8.4.2	Selection Method .....	8-30
8.4.3	Enlarging and Reducing the Size .....	8-31
8.4.4	Moving Objects .....	8-31
8.4.5	Duplicate .....	8-32
8.4.6	Changing Attributes .....	8-34
8.4.7	Grouping (Ungrouping) .....	8-35
8.4.8	Order .....	8-36
8.4.9	Aligning .....	8-37
8.4.10	Rotating Right or Left .....	8-38
8.4.11	Reversing X-Axis (Vertical)/Y-Axis (Horizontal) .....	8-39
8.4.12	Changing Coordinates .....	8-40
8.4.13	Protecting Objects That You do not Want to Edit .....	8-41
8.5	Changing Colors, Line Types and Patterns .....	8-42
8.5.1	Setting Colors .....	8-42
8.5.2	Setting Blinks .....	8-49

8.5.3	Setting Line Types .....	8-50
8.5.4	Setting Patterns .....	8-51
8.6	Editing a Part .....	8-52
8.6.1	Editing Parts .....	8-52
8.6.2	Creating Your Own Parts .....	8-59
8.6.3	Registering Frequently Used Parts as Your Favorites .....	8-63
8.7	Using a Screen Multiple Times .....	8-65
8.7.1	Setup Procedure .....	8-65
8.8	Editing a Picture on Another Screen .....	8-68
8.8.1	Placing Pictures Registered in the Package .....	8-68
8.8.2	Registering Pictures in the Package .....	8-70
8.9	Creating a Screen from a Template .....	8-72
8.9.1	Setting up Grids .....	8-72
8.9.2	Selecting a Screen from Template .....	8-75
8.10	Pasting an Image .....	8-78
8.10.1	Target Image .....	8-78
8.10.2	Pasting BMP/JPEG Procedure .....	8-79
8.11	Drawing a Detailed Picture .....	8-85
8.11.1	Drawing a Valve .....	8-85
8.11.2	Displaying a Character External to the Character Code .....	8-91
8.12	Settings Guide .....	8-97
8.12.1	Text Settings Guide .....	8-97
8.12.2	Package List Setup Guide .....	8-99
8.12.3	Preferences (Screen Edit Style) Setup Guide .....	8-101
8.12.4	Common (Mark Registration) Settings Guide .....	8-104
8.13	Restrictions .....	8-106
8.13.1	Restrictions for Drawing (Text) .....	8-106
8.13.2	Restrictions for Pasting BMP/JPEG .....	8-106
8.13.3	Package Registration Restrictions .....	8-107
8.13.4	Restrictions on Marks .....	8-107
8.13.5	Restrictions for Screen Display .....	8-107

## Chapter 9 Displaying Pictures

---

9.1	Settings Menu .....	9-2
9.2	Changing a Picture with Bit ON/OFF .....	9-4
9.2.1	Introduction .....	9-4
9.2.2	Setup Procedure .....	9-5
9.3	Displaying Alternate Pictures .....	9-10
9.3.1	Introduction .....	9-10
9.3.2	Procedure .....	9-10
9.4	Moving a Picture .....	9-15

9.4.1	Introduction .....	9-15
9.4.2	Setup Procedure .....	9-15
9.5	Settings Guide .....	9-20
9.5.1	Common (Image Registration) Settings Guide .....	9-20
9.5.2	Picture Display Settings Guide .....	9-22
9.6	Restrictions .....	9-47
9.6.1	Restrictions for Picture Display (ON/OFF Display) .....	9-47
9.6.2	Restrictions for Picture Display (State Display) .....	9-52
9.6.3	Restrictions for Picture Display (Move Display) .....	9-53
9.6.4	Restrictions for Picture Display (CF Image Display) .....	9-55

## Chapter 10 Switches

---

10.1	Settings Menu .....	10-2
10.2	Creating a Bit Switch .....	10-4
10.2.1	Introduction .....	10-4
10.2.2	Setup Procedure .....	10-5
10.3	Inverting a Bit ON/OFF .....	10-7
10.3.1	Introduction .....	10-7
10.3.2	Setup Procedure .....	10-8
10.4	Writing a Value .....	10-10
10.4.1	Introduction .....	10-10
10.4.2	Setup Procedure .....	10-11
10.5	Increasing/Decreasing a Value .....	10-13
10.5.1	Introduction .....	10-13
10.5.2	Setup Procedure .....	10-14
10.6	Conditionally ON Bit Switches (Comparison) .....	10-16
10.6.1	Introduction .....	10-16
10.6.2	Setup Procedure .....	10-17
10.7	Using Interlock to Prevent Malfunctions .....	10-19
10.7.1	Introduction .....	10-19
10.7.2	Setup Procedure .....	10-20
10.8	Creating a Delayed Operation Switch .....	10-22
10.8.1	Introduction .....	10-22
10.8.2	Setup Procedure .....	10-23
10.9	Setting a Delay Time for Switch OFF .....	10-25
10.9.1	Introduction .....	10-25
10.9.2	Setup Procedure .....	10-26
10.10	Confirming Before Turning a Switch ON (Double Touch) .....	10-28
10.10.1	Introduction .....	10-28
10.10.2	Setup Procedure .....	10-29
10.11	Creating a Color-Changing Switch .....	10-31
10.11.1	Introduction .....	10-31

10.11.2	Setup Procedure .....	10-32
10.12	Performing Multiple Functions with One Switch .....	10-34
10.12.1	Introduction .....	10-34
10.12.2	Setup Procedure .....	10-35
10.13	Creating a Radio Switch .....	10-38
10.13.1	Introduction .....	10-38
10.13.2	Setup Procedure .....	10-39
10.14	Switch Lamp Parts Settings Guide .....	10-42
10.14.1	Bit Switch .....	10-45
10.14.2	Word Switch .....	10-59
10.14.3	Change Screen Switch .....	10-63
10.14.4	Special Switch .....	10-64
10.14.5	Selector Switch .....	10-74
10.15	Restrictions for Switches .....	10-75
10.15.1	Restrictions on the Delay Feature .....	10-76
10.15.2	Restrictions on the Multifunction Feature .....	10-77
10.15.3	Group Function Limitations .....	10-77

## Chapter 11 Changing and Saving Screens

---

11.1	Settings Menu .....	11-2
11.2	Changing Screens by Touch .....	11-4
11.2.1	Introduction .....	11-4
11.2.2	Setup Procedure .....	11-5
11.3	Choosing the Screen to Display when the GP Turns on .....	11-7
11.3.1	Introduction .....	11-7
11.3.2	Setup Procedure .....	11-8
11.4	Changing Screens from a Device/PLC .....	11-10
11.4.1	Introduction .....	11-10
11.4.2	Setup Procedure .....	11-11
11.5	Changing the Displayed Screen from both Touch and a Device/PLC .....	11-13
11.5.1	Introduction .....	11-13
11.5.2	Setup Procedure .....	11-14
11.6	Saving the Displayed Screen .....	11-18
11.6.1	Introduction .....	11-18
11.6.2	Setup Procedure .....	11-19
11.7	Changing the Displayed Screen by Hierarchical Structure .....	11-21
11.7.1	Introduction .....	11-21
11.7.2	Setup Procedure .....	11-22
11.8	Restrictions .....	11-25
11.8.1	Restrictions for Screen Change .....	11-25
11.8.2	Restrictions for Screen Capture .....	11-26

---

## Chapter 12 Windows

---

12.1	Settings Menu .....	12-2
12.2	Creating Windows .....	12-4
12.2.1	Introduction .....	12-4
12.2.2	Setup Procedure .....	12-5
12.3	Displaying Windows .....	12-7
12.3.1	Introduction .....	12-7
12.3.2	Setup Procedure .....	12-8
12.4	Changing the Displayed Window .....	12-11
12.4.1	Introduction .....	12-11
12.4.2	Setup Procedure .....	12-12
12.5	Displaying the Same Window on All Screens .....	12-14
12.5.1	Introduction .....	12-14
12.5.2	Setup Procedure .....	12-15
12.6	Changing the Displayed Window on All Screens .....	12-17
12.6.1	Introduction .....	12-17
12.6.2	Setup Procedure .....	12-18
12.7	Window Part Settings Guide .....	12-21
12.7.1	Bit Action .....	12-22
12.7.2	Word Action .....	12-23
12.7.3	Activate Switch .....	12-26
12.8	Restrictions for Windows .....	12-29
12.8.1	Restrictions for Window Screens .....	12-29
12.8.2	Restrictions for Window Screens .....	12-30

---

## Chapter 13 Using Lamps

---

13.1	Settings Menu .....	13-2
13.2	Turning the Lamp ON/OFF with the ON/OFF Bit .....	13-4
13.2.1	Introduction .....	13-4
13.2.2	Setup Procedure .....	13-5
13.3	Switching by Turning Multiple Bits ON/OFF (Up to 5 States) .....	13-8
13.3.1	Introduction .....	13-8
13.3.2	Setup Procedure .....	13-9
13.4	Switching by a Combination of Multiple Bits (Up to 16 States) .....	13-13
13.4.1	Introduction .....	13-13
13.4.2	Setup Procedure .....	13-14
13.5	Switching by the Word Address Bit Change (Bit Settings) .....	13-19
13.5.1	Introduction .....	13-19
13.5.2	Setup Procedure .....	13-20
13.6	Change When Word Address Value Changes .....	13-25
13.6.1	Introduction .....	13-25
13.6.2	Setup Procedure .....	13-26



13.7	Procedure for Creating a Lamp .....	13-31
13.8	Lamp Settings Guide .....	13-33
13.8.1	Common to All Parts .....	13-33
13.8.2	Lamp Feature .....	13-35
13.8.3	Color .....	13-38
13.8.4	Label .....	13-39

## Chapter 14 Data Display and Data Input

---

14.1	Settings Menu .....	14-2
14.2	Displaying/Inputting Numeric Data .....	14-5
14.2.1	Introduction .....	14-5
14.2.2	Setup Procedure .....	14-6
14.3	Displaying/Inputting Text Data .....	14-8
14.3.1	Introduction .....	14-8
14.3.2	Setup Procedure .....	14-9
14.4	Displaying Numerical Data as an Alarm .....	14-12
14.4.1	Introduction .....	14-12
14.4.2	Setup Procedure .....	14-12
14.5	Color-coding and Displaying Multiple Ranges .....	14-16
14.5.1	Introduction .....	14-16
14.5.2	Setup Procedure .....	14-17
14.6	Displaying the Date and Time .....	14-22
14.6.1	Introduction .....	14-22
14.6.2	Setup Procedure .....	14-22
14.7	Preventing Operational Errors By Using Interlock .....	14-24
14.7.1	Introduction .....	14-24
14.7.2	Setup Procedure .....	14-25
14.8	Prevent Entering Data Outside the Allowed Range .....	14-28
14.8.1	Introduction .....	14-28
14.8.2	Setup Procedure .....	14-28
14.9	8 x16 Dots Sequential Input .....	14-31
14.9.1	Introduction .....	14-31
14.9.2	Setup Procedure .....	14-31
14.10	Changing Values by Adding/Subtracting .....	14-34
14.10.1	Introduction .....	14-34
14.10.2	Setup Procedure .....	14-34
14.11	Data Display Settings Guide .....	14-39
14.11.1	Numeric Display .....	14-41
14.11.2	Text Display .....	14-81
14.11.3	Date/Time Display .....	14-97
14.11.4	Statistical Data Display .....	14-100
14.11.5	Show Limit Value .....	14-105

14.12	Restrictions .....	14-107
14.12.1	Text Display Restrictions .....	14-107
14.12.2	Limitations of Time-Base Function .....	14-109
14.13	How Data Input Order Works .....	14-110
14.13.1	Set Input Order .....	14-110
14.13.2	Set Input Order by Group .....	14-111

## Chapter 15 Keypad Input

---

15.1	Settings Menu .....	15-2
15.2	Popup Keypad Display .....	15-3
15.2.1	Introduction .....	15-3
15.2.2	Setup Procedure .....	15-3
15.3	Constant Keypad Display .....	15-6
15.3.1	Introduction .....	15-6
15.3.2	Setup Procedure .....	15-6
15.4	Customizing the Keypad Layout .....	15-9
15.4.1	Introduction .....	15-9
15.4.2	Setup Procedure .....	15-9
15.5	Setup Guide .....	15-21
15.5.1	Keypad Settings Guide .....	15-21
15.5.2	Common (Keypad Registration) Settings Guide .....	15-24
15.5.3	Key Part Settings Guide .....	15-28
15.6	Restrictions .....	15-38
15.6.1	Restrictions for Popup Keypad .....	15-38
15.6.2	Restrictions for Keypad Direct Placement .....	15-39
15.6.3	Restrictions for Keypad Customization .....	15-39
15.6.4	Restrictions for Clear Area .....	15-40
15.6.5	Restrictions for Japanese FEP .....	15-41

## Chapter 16 Bar Code/USB Keyboard Inputs

---

16.1	Settings Menu .....	16-2
16.2	Connecting a Barcode/Two-dimensional Code Reader .....	16-4
16.2.1	Introduction .....	16-4
16.2.2	Setup Procedure .....	16-5
16.2.3	Barcode Inputs .....	16-16
16.3	Display USB Keyboard Inputs .....	16-19
16.3.1	Details .....	16-19
16.3.2	Setup Procedure .....	16-20
16.4	Settings Guide .....	16-24
16.4.1	[Input Equipment Settings] Settings Guide .....	16-24
16.5	Restrictions .....	16-30
16.5.1	Bar Code Restrictions .....	16-30

16.5.2	USB Keyboard Restrictions .....	16-31
--------	---------------------------------	-------

## Chapter 17 Displaying and Changing Text

---

17.1	Settings Menu .....	17-2
17.2	Changing and Displaying Messages (Text) .....	17-4
17.2.1	Introduction .....	17-4
17.2.2	Setup Procedure .....	17-5
17.3	Changing the Displayed Text .....	17-8
17.3.1	Introduction .....	17-8
17.3.2	Setup Procedure .....	17-9
17.4	Changing Languages (Multilanguage) .....	17-16
17.4.1	Introduction .....	17-16
17.4.2	Setup Procedure .....	17-17
17.5	Changing a Text's Language (Multilanguage) .....	17-25
17.5.1	Introduction .....	17-25
17.5.2	Setup Procedure .....	17-26
17.6	Importing/Exporting Registered Text Tables for Use in Different Projects .....	17-33
17.6.1	Introduction .....	17-33
17.6.2	Setup Procedure .....	17-34
17.6.3	Text Table File Format .....	17-38
17.7	Settings Guide .....	17-39
17.7.1	Message Display Settings Guide .....	17-39
17.7.2	Common (Text Registration) Settings Guide .....	17-52
17.7.3	Text Table Settings Guide .....	17-54
17.7.4	Switch/Lamp - Label (Enable Text Table) Settings Guide .....	17-59
17.7.5	Drawing Text (Using the Text Table) Settings Guide .....	17-61
17.7.6	Alarm Part - Item/Details (Text Table) Settings Guide .....	17-63
17.7.7	Alarm (Enable Text Table) Settings Guide .....	17-64
17.7.8	Placing Text When Using Text Tables .....	17-65
17.8	Restrictions .....	17-69
17.8.1	Restrictions on Message Display .....	17-69
17.8.2	Language Change (Multilanguage) Restrictions .....	17-69
17.8.3	Restrictions on Text Table Converter .....	17-71

## Chapter 18 Graph Display

---

18.1	Settings Menu .....	18-2
18.2	Displaying the Current Value in a Bar/Circle/Tank Graph .....	18-4
18.2.1	Introduction .....	18-4
18.2.2	Procedure .....	18-5
18.3	Displaying Alarms in a Bar/Circle/Tank Graph .....	18-7
18.3.1	Introduction .....	18-7
18.3.2	Procedure .....	18-8

18.4	Using Line Charts .....	18-11
18.4.1	Introduction .....	18-11
18.4.2	Procedure .....	18-12
18.5	Using a Line Chart to View Historic Data .....	18-15
18.5.1	Introduction .....	18-15
18.5.2	Procedure .....	18-16
18.5.3	Operating Procedure .....	18-19
18.6	Displaying Multiple Addresses Concurrently (Block Display) .....	18-25
18.6.1	Introduction .....	18-25
18.6.2	Procedure .....	18-26
18.6.3	Displaying/Clearing a Data Block Display Graph .....	18-28
18.7	Settings Guide .....	18-30
18.7.1	Graph Part Settings Guide .....	18-30
18.7.2	Historical Trend Graph Settings Guide .....	18-46
18.7.3	Data Block Display Graph Settings Guide .....	18-68
18.8	Restrictions .....	18-84
18.8.1	Restrictions for Graphs .....	18-84
18.8.2	Restrictions for Historical Trend Graphs .....	18-84
18.8.3	Data Block Display Graph Restrictions .....	18-88

## Chapter 19 Alarm

---

19.1	Settings Menu .....	19-2
19.2	Scrolling Alarm Messages .....	19-8
19.2.1	Introduction .....	19-8
19.2.2	Setup Procedure .....	19-12
19.3	Viewing Active Alarms in a List .....	19-15
19.3.1	Introduction .....	19-15
19.3.2	Setup Procedure .....	19-16
19.4	Acknowledging the Alarm History .....	19-21
19.4.1	Introduction .....	19-21
19.4.2	Setup Procedure .....	19-22
19.5	Working with Alarm History .....	19-32
19.5.1	Introduction .....	19-32
19.5.2	Setup Procedure .....	19-33
19.6	Displaying Help (Sub Display) .....	19-36
19.6.1	Introduction .....	19-36
19.6.2	Setup Procedure .....	19-37
19.7	Viewing Alarms by Line .....	19-50
19.7.1	Introduction .....	19-50
19.7.2	Setup Procedure .....	19-51
19.8	Storing Alarm Messages in the CF Card or USB Storage Device .....	19-56
19.8.1	Details .....	19-56

19.8.2	Setup Procedure .....	19-57
19.8.3	Structure .....	19-59
19.9	Read data when Alarms occur .....	19-64
19.9.1	Details .....	19-64
19.9.2	Setting Procedure .....	19-65
19.10	Settings Guide .....	19-72
19.10.1	Common (Alarm) Settings Guide .....	19-72
19.10.2	Alarm Parts Settings Guide .....	19-105
19.10.3	Text Alarm Part Settings Guide .....	19-144
19.11	Restrictions .....	19-160
19.11.1	Restrictions for Printing Alarm History .....	19-160
19.11.2	Restrictions for Sub Display/Details .....	19-161
19.11.3	Restrictions for Running External Operations from Multiple Display Units .....	19-163
19.11.4	Text Alarm Part Restrictions .....	19-165
19.12	Alarm Feature List .....	19-166

## Chapter 20 Using Scripts (Programming without Parts)

---

20.1	Settings Menu .....	20-2
20.2	Conditional Operations .....	20-5
20.3	Copying Data in Blocks .....	20-12
20.4	Displaying an Alarm When an Error Occurs .....	20-17
20.5	Communicating with Unsupported Peripheral Devices .....	20-21
20.6	Procedure for Creating Scripts .....	20-39
20.6.1	Procedure for Creating D-Scripts/Global D-Scripts .....	20-39
20.6.2	Procedure for Creating Extended Scripts .....	20-41
20.6.3	Setting Up User-Defined Functions .....	20-42
20.7	Triggered Condition Setup .....	20-44
20.7.1	Continuous Action .....	20-44
20.7.2	Timer .....	20-44
20.7.3	Bit .....	20-45
20.7.4	Condition Expression .....	20-46
20.8	Settings Guide .....	20-51
20.8.1	D-Script/Common [Global D-Script] Settings Guide .....	20-51
20.8.2	User-Defined Functions Settings Guide .....	20-56
20.9	Restrictions .....	20-57
20.9.1	D-Script/Global D-Script Restrictions .....	20-57
20.9.2	Extended Script Restrictions .....	20-61
20.9.3	Restrictions on User-Defined Functions .....	20-63
20.9.4	Notes on Operation Results .....	20-64
20.9.5	Errors .....	20-65
20.10	Program Instructions/Conditional Expressions .....	20-66

20.10.1	Bit Operation .....	20-71
20.10.2	Draw .....	20-72
20.10.3	Memory Operation .....	20-76
20.10.4	SIO Port Operation .....	20-97
20.10.5	CF File Operation/USB File Operation .....	20-107
20.10.6	Printer Operation .....	20-133
20.10.7	Others .....	20-139
20.10.8	Conditional Expressions .....	20-144
20.10.9	Comparison .....	20-148
20.10.10	Operator .....	20-150
20.10.11	Text Operation .....	20-154
20.10.12	Operation Example .....	20-170

## Chapter 21 Enhancing Security

---

21.1	Settings Menu .....	21-2
21.2	Creating Limited Access Screens .....	21-4
21.2.1	Setup Procedure .....	21-4
21.3	Limiting Screen Access by Authority .....	21-7
21.3.1	Setup Procedure .....	21-7
21.4	Disable All Touch Operations for the Timing .....	21-10
21.4.1	Detail .....	21-10
21.4.2	Procedure .....	21-11
21.5	Save Operation History .....	21-12
21.5.1	Detail .....	21-12
21.5.2	Procedure .....	21-13
21.6	Password/User ID Input Window .....	21-16
21.6.1	Introduction to "Level Mode" and "User ID Mode" .....	21-16
21.7	Settings Guide .....	21-19
21.7.1	Common (Security Settings) Settings Guide .....	21-19
21.7.2	Common Settings (Operation Log Settings) Guide .....	21-29
21.8	Restrictions .....	21-54
21.8.1	Restrictions on Passwords and IDs .....	21-54
21.8.2	Restrictions on the global interlock .....	21-56
21.8.3	Restrictions on the operation log .....	21-57

## Chapter 22 Scheduling Operations

---

22.1	Settings Menu .....	22-2
22.2	Turning ON/OFF a Motor at the Designated Time .....	22-3
22.2.1	Setup Procedure .....	22-3
22.3	Changing the Temperature at the Designated Time .....	22-7
22.3.1	Setup Procedure .....	22-7
22.4	Common Time Schedule Settings Guide .....	22-11

22.4.1	Time Schedule Tab .....	22-11
22.4.2	[Time Schedule] Dialog Box Settings Guide .....	22-12
22.5	Restrictions .....	22-22

## Chapter 23 Data Sampling

---

23.1	An Introduction to the Sampling Feature .....	23-2
23.1.1	What is the Sampling Feature? .....	23-2
23.2	Settings Menu .....	23-3
23.3	Sampling Data at Constant Intervals .....	23-5
23.3.1	Introduction .....	23-5
23.3.2	Setup Procedure .....	23-6
23.4	Sampling Data at Specific Periods .....	23-10
23.4.1	Introduction .....	23-10
23.4.2	Setup Procedure .....	23-11
23.5	Displaying Sampled Data .....	23-14
23.5.1	Introduction .....	23-14
23.5.2	Setup Procedure .....	23-15
23.6	Saving Sampling Data to CF Card/USB storage .....	23-20
23.6.1	Introduction .....	23-20
23.6.2	Setup Procedure .....	23-21
23.6.3	CF Card/USB Storage Save Operation .....	23-23
23.7	Display/Save Sampled Data in CSV with a Custom Format .....	23-30
23.7.1	Introduction .....	23-30
23.7.2	Setup Procedure .....	23-31
23.8	Settings Guide .....	23-37
23.8.1	Common (Sampling) Settings Guide .....	23-37
23.8.2	Sampling Data Display Guide .....	23-104
23.9	Sampling Structure .....	23-110
23.9.1	Summary .....	23-110
23.9.2	The Sampling Action .....	23-115
23.9.3	About Sampling Data Display .....	23-126
23.9.4	About Save in CF Card/USB Storage .....	23-131
23.9.5	Printing .....	23-134
23.9.6	Writing to the Internal Device .....	23-140
23.10	Restrictions .....	23-144
23.10.1	Data Sampling Restrictions .....	23-144
23.10.2	Display Restrictions .....	23-146
23.10.3	Restrictions on CF Card/USB Storage Save .....	23-147
23.10.4	Restrictions on Printing .....	23-149

## Chapter 24 Setting Recipes

---

24.1	Recipes .....	24-2
------	---------------	------

24.1.1	What are Recipes? .....	24-2
24.1.2	Types of Recipes .....	24-3
24.2	Settings Menu .....	24-6
24.3	Creating CSV Data Recipes .....	24-10
24.3.1	Introduction .....	24-10
24.3.2	Setup Procedure .....	24-11
24.4	Transferring CSV Data Recipes Using Touch .....	24-18
24.4.1	Introduction .....	24-18
24.4.2	Setup Procedure .....	24-19
24.4.3	Transfer Process .....	24-24
24.5	Transferring CSV Data Recipes from the Device .....	24-26
24.5.1	Introduction .....	24-26
24.5.2	Setup Procedure .....	24-27
24.5.3	Transfer Process .....	24-30
24.6	Displaying/Editing CSV data on the Screen .....	24-31
24.6.1	Introduction .....	24-31
24.6.2	Setup Procedure .....	24-32
24.6.3	Operating Procedure .....	24-37
24.7	Creating Filing Data Recipes .....	24-43
24.7.1	Introduction .....	24-43
24.7.2	Setup Procedure .....	24-44
24.8	Transferring Recipes (Filing Data) Using Manual Transfer .....	24-47
24.8.1	Introduction .....	24-47
24.8.2	Setup Procedure .....	24-48
24.8.3	Transfer Process .....	24-52
24.9	Transferring Recipes (Filing Data) Using Automatic Transfer .....	24-53
24.9.1	Introduction .....	24-53
24.9.2	Setup Procedure .....	24-54
24.9.3	Transfer Process .....	24-56
24.10	Settings Guide .....	24-57
24.10.1	Common [Recipe] Setup Guide .....	24-57
24.10.2	[Special Data Display] Settings Guide .....	24-72
24.11	Mechanism of Transfer CSV Data Setup .....	24-91
24.11.1	How to Transfer CSV Data .....	24-91
24.11.2	Control Word Address .....	24-93
24.11.3	About Condition Name Search Feature .....	24-101
24.11.4	About Automatic Numbering .....	24-107
24.12	Mechanism of Filing Data Transfer .....	24-109
24.12.1	Filing Data Structure .....	24-109
24.12.2	Transferring Item Name and Block Number .....	24-112
24.12.3	Manual Transfer Via the Internal Device .....	24-114
24.13	Restrictions .....	24-117
24.13.1	Restrictions on Transferring CSV Data .....	24-117



24.13.2	Restrictions on Displaying/Editing/Printing CSV Data .....	24-121
24.13.3	Restrictions on Transferring Filing Data .....	24-124

## Chapter 25 Using Audio Notifications

---

25.1	Settings Menu .....	25-2
25.2	Announcing Alarms with Sound .....	25-3
25.2.1	Introduction .....	25-3
25.2.2	Setup Procedure .....	25-4
25.3	Sounding the GP Buzzer from a Device/PLC .....	25-7
25.3.1	Introduction .....	25-7
25.3.2	Setup Procedure .....	25-8
25.4	Triggering a Buzzer Sound from the GP .....	25-10
25.4.1	Introduction .....	25-10
25.4.2	Setup Procedure .....	25-11
25.5	Settings Guide .....	25-13
25.5.1	Common (Sound) Settings Guide .....	25-13
25.6	Restrictions .....	25-16

## Chapter 26 Recording and Playing Video

---

26.1	Settings Menu .....	26-2
26.2	Displaying Video Camera Output .....	26-8
26.2.1	Introduction .....	26-8
26.2.2	Setup Procedure .....	26-9
26.3	Recording Video .....	26-12
26.3.1	Introduction .....	26-12
26.3.2	Setup Procedure .....	26-13
26.4	Recording Video Before and After a Malfunction .....	26-20
26.4.1	Introduction .....	26-20
26.4.2	Setup Procedure .....	26-21
26.5	Playing Movies .....	26-25
26.5.1	Introduction .....	26-25
26.5.2	Setup Procedure .....	26-26
26.5.3	Converting Movie Files .....	26-41
26.6	Displaying Multiple Video Camera Outputs Simultaneously .....	26-50
26.6.1	Introduction .....	26-50
26.6.2	Setup Procedure .....	26-51
26.7	Displaying PC Screen .....	26-59
26.7.1	Introduction .....	26-59
26.7.2	Setup Procedure .....	26-60
26.8	Saving Video Output as Still Images .....	26-65
26.8.1	Introduction .....	26-65
26.8.2	Setup Procedure .....	26-66

26.9	Settings Guide .....	26-74
26.9.1	[Video/Movie] Settings Guide .....	26-74
26.9.2	[FTP Server] Settings Guide .....	26-94
26.9.3	Common [Movie] Settings Guide .....	26-96
26.9.4	[Movie Player] Settings Guide .....	26-98
26.9.5	Common [Video Module] Settings Guide .....	26-118
26.9.6	[Video Module] Settings Guide .....	26-127
26.9.7	Video Module Display Settings Guide .....	26-142
26.10	Restrictions .....	26-145
26.10.1	Restrictions on Movie Features .....	26-146
26.10.2	Restrictions on Video Module Features .....	26-149

## Chapter 27 Using Logic Functions

---

27.1	Setup Menu .....	27-2
27.2	Switching Screens Using a Logic Program .....	27-4
27.2.1	Detail .....	27-4
27.3	Generating a Pulse at One Second Intervals .....	27-5
27.3.1	Detail .....	27-5
27.4	Entering the Timer Value on the Screen .....	27-6
27.4.1	Detail .....	27-6
27.5	Moving Data Between Connection Devices .....	27-7
27.5.1	Detail .....	27-7

## Chapter 28 Logic Programming

---

28.1	Logic Programming Steps .....	28-2
28.2	Preparing to Create Logic Programs .....	28-3
28.2.1	Use Logic Feature .....	28-3
28.2.2	Logic Type .....	28-3
28.2.3	Logic Screen Logic Screen Part Name .....	28-5
28.2.4	Customizing the Toolbar .....	28-6
28.3	Registering Addresses .....	28-13
28.3.1	Usable Addresses .....	28-13
28.3.2	To use addresses with flexible names (Variable Format) .....	28-20
28.3.3	To use prepared addresses (Address Format) .....	28-32
28.3.4	Using External Addresses .....	28-37
28.3.5	Using Internal Addresses .....	28-39
28.3.6	System Variable .....	28-41
28.4	Inserting Rungs and Branches .....	28-42
28.4.1	Editing Rungs .....	28-42
28.4.2	Inserting and Deleting Branches .....	28-49
28.5	Insert Ladder Instructions .....	28-51
28.5.1	Editing Instructions .....	28-51

28.5.2	Subroutines and Labels .....	28-59
28.6	Allocating Addresses to Instructions .....	28-66
28.6.1	Operand Settings .....	28-66
28.7	Input Comments .....	28-72
28.7.1	Adding Titles .....	28-72
28.7.2	Adding Rung Comments .....	28-74
28.7.3	Symbol Variable Comments .....	28-76
28.7.4	[Comment List] Window .....	28-78
28.8	Logic Operations with Power ON .....	28-81
28.9	Transferring Logic Programs .....	28-84
28.10	Correcting Logic Program Errors .....	28-86
28.11	To monitor logic programs on the computer (Online Monitor) .....	28-88
28.11.1	Online Monitoring Procedures .....	28-89
28.11.2	Monitor/Change the Current Value of Symbol Variables .....	28-90
28.11.3	Adjusting the Setting Values for the PID Instruction .....	28-93
28.11.4	To edit logic programs that are being monitored (Online Edit) .....	28-95
28.12	To monitor logic programs on the GP (Logic Monitor) .....	28-99
28.12.1	Starting and Ending the Logic Monitor .....	28-100
28.12.2	Logic Monitor Functions .....	28-102
28.13	Convenient features to create/edit logic .....	28-109
28.13.1	Replacing Parts in Instructions and Instructions in Parts .....	28-109
28.13.2	Checking the Size for Creating Programs .....	28-123
28.13.3	Logic To adjust Scan Time .....	28-128
28.13.4	To enhance security .....	28-138
28.13.5	Using Reference Features to Search Logic Programs .....	28-140
28.13.6	Using Previously Created Logic Programs .....	28-144
28.13.7	To delete unused symbol variables at once .....	28-152
28.14	Settings Guide .....	28-154
28.14.1	[Logic Programs] Setting Guide .....	28-154
28.14.2	[Work Space] Settings Guide .....	28-155
28.15	Restrictions .....	28-161
28.15.1	Delay of Scan Time .....	28-161
28.15.2	Restriction of Online Monitor .....	28-163
28.15.3	Restriction of Logic Monitor .....	28-164
28.15.4	Restriction of Logic Action when the power is ON .....	28-164

## Chapter 29 Ladder Instructions

---

29.1	Instructions .....	29-2
29.2	Instruction Notation List .....	29-6
29.2.1	Basic Instructions .....	29-6
29.2.2	Timer Instruction .....	29-8
29.2.3	Counter Instruction .....	29-8

29.2.4	R/W Instructions .....	29-10
29.2.5	Arithmetic Operation .....	29-11
29.2.6	Time Operation .....	29-13
29.2.7	Logical Operation .....	29-14
29.2.8	Transfer Instructions .....	29-16
29.2.9	Shift Instructions .....	29-17
29.2.10	Rotation Instructions .....	29-19
29.2.11	Function Operations .....	29-21
29.2.12	Trigonometric Function .....	29-23
29.2.13	Other Functions .....	29-25
29.2.14	Arithmetic Compare .....	29-26
29.2.15	Time Compare .....	29-27
29.2.16	Date Compare .....	29-28
29.2.17	Data Conversion Instructions .....	29-29
29.2.18	Type Conversion Instructions .....	29-31
29.2.19	I/O Driver .....	29-33
29.3	About Addresses You can Set up as Operands .....	29-34
29.3.1	Connection Device Address .....	29-34
29.3.2	Symbol .....	29-34
29.3.3	LS Address .....	29-35
29.3.4	USR area .....	29-36
29.3.5	System Variable .....	29-37
29.3.6	Variable .....	29-38
29.3.7	Logic Device when using the Address Format .....	29-41
29.4	Number of Steps Per Instruction .....	29-42
29.5	Instruction Descriptions .....	29-43
29.5.1	Bit Instructions .....	29-43
29.5.2	Pulse Instruction .....	29-57
29.5.3	Program Control .....	29-61
29.5.4	Timer Instruction .....	29-81
29.5.5	Counter Instruction .....	29-94
29.5.6	R/W Instructions .....	29-101
29.5.7	Operation (Arithmetic) .....	29-110
29.5.8	Operation (Time) .....	29-160
29.5.9	Operation (Logical) .....	29-170
29.5.10	Operation (Transfer) .....	29-201
29.5.11	Calculation Instruction (Shift Instruction) .....	29-232
29.5.12	Operation (Rotation Instruction) .....	29-270
29.5.13	Function Instruction .....	29-310
29.5.14	Function Instruction .....	29-354
29.5.15	Compare Instruction (Arithmetic) .....	29-405
29.5.16	Compare (Time) .....	29-435
29.5.17	Compare (Date) .....	29-459

29.5.18	Convert (Data)	29-483
29.5.19	Convert Type	29-519
29.5.20	I/O Driver Instructions	29-573

## Chapter 30 Controlling External I/O

---

30.1	Controlling External I/O	30-2
30.1.1	Summary	30-2
30.1.2	Mapping Addresses (variables) to I/O Terminals	30-3
30.2	Settings Guide	30-8
30.2.1	I/O Screen Settings Guide	30-8
30.3	Controlling GP External I/O	30-9
30.3.1	Detail	30-9
30.3.2	Setup Procedure	30-9
30.3.3	[I/O Driver Settings] Setting Guide	30-12
30.4	Using FlexNetwork External I/O	30-13
30.4.1	Detail	30-13
30.4.2	Procedure	30-15
30.4.3	I/O Terminal Operations	30-18
30.4.4	[I/O Driver] Settings Guide	30-19
30.5	Controlling External I/O in LT	30-24
30.5.1	Summary	30-24
30.5.2	Mapping I/O (Common)	30-26
30.5.3	Interface Specification	30-46
30.5.4	Standard Input	30-49
30.5.5	Standard Output	30-52
30.5.6	High Speed Counter (Common)	30-54
30.5.7	High Speed Counter (Single-phase Settings)	30-56
30.5.8	High speed counter (2-phase settings)	30-81
30.5.9	PWM Output	30-88
30.5.10	Normal Pulse Output	30-97
30.5.11	Acceleration/Deceleration Pulse Output	30-105
30.5.12	Pulse Catch	30-121
30.5.13	Error information	30-123
30.5.14	Restrictions	30-126
30.6	Controlling I/O in LT and EX Modules	30-127
30.6.1	Detail	30-127
30.6.2	Setup Procedure	30-129
30.6.3	I/O Driver's [External Driver] Settings Guide	30-131
30.6.4	Error information	30-139
30.6.5	Restrictions	30-145
30.7	Controlling External I/O by Using HTB	30-146
30.7.1	Summary	30-146

30.7.2	Setting Procedure .....	30-148
30.7.3	Allocating I/O (Common) .....	30-152
30.7.4	Standard I/O .....	30-155
30.7.5	Expanding I/O Using EX Module .....	30-161
30.7.6	Using I/O Driver Instructions .....	30-180
30.7.7	[I/O Driver] Settings Guide .....	30-188
30.7.8	Error information .....	30-205
30.7.9	Restrictions .....	30-210
30.7.10	List of HTB Objects .....	30-211

## Chapter 31 Simulation

---

31.1	Settings Menu .....	31-2
31.2	Checking the Display operation on the PC. ....	31-3
31.2.1	Details .....	31-3
31.2.2	Procedure .....	31-4
31.3	Checking the operation of the I/O driver on the PC .....	31-8
31.3.1	Details .....	31-8
31.3.2	Procedure .....	31-9
31.4	Settings Guide .....	31-14
31.4.1	Setting Guide for [GP-Pro EX Simulation] .....	31-14
31.4.2	[Address View] Settings Guide .....	31-18
31.4.3	[I/O View] Settings Guide .....	31-21
31.5	Restrictions .....	31-23

## Chapter 32 Transferring Projects and Data

---

32.1	Settings Menu .....	32-2
32.2	Transferring Project Files via USB Cable Transfer .....	32-5
32.2.1	Introduction .....	32-5
32.2.2	Transfer Process .....	32-6
32.3	Transferring Project Files via Ethernet (LAN) .....	32-12
32.3.1	Introduction .....	32-12
32.3.2	Transfer Process .....	32-13
32.4	Comparing Project Changes Prior to Transfer .....	32-25
32.4.1	Introduction .....	32-25
32.4.2	Comparison Procedure .....	32-26
32.5	Transferring Data Only to a CF Card .....	32-28
32.5.1	Introduction .....	32-28
32.5.2	Transfer Process .....	32-29
32.6	Transferring with Passwords .....	32-31
32.6.1	Introduction .....	32-31
32.6.2	Setup Procedure .....	32-32
32.6.3	Remove/Change Transfer Password .....	32-34

32.7	Transferring project files using a CF Card or USB storage .....	32-36
32.7.1	Introduction .....	32-36
32.7.2	Transfer Process .....	32-37
32.8	Updating Remote Screen Data via Modem .....	32-48
32.8.1	Introduction .....	32-48
32.8.2	Transfer Process .....	32-49
32.9	Checking Errors .....	32-53
32.9.1	Introduction .....	32-53
32.9.2	Setup Procedure .....	32-54
32.10	Setting Up Transfer Tool .....	32-56
32.10.1	[Transfer Settings] Settings Guide .....	32-59
32.10.2	[Modem] Settings Guide .....	32-65
32.10.3	How Sending Data Works .....	32-66
32.10.4	How Receive Works .....	32-67
32.10.5	Installing the Transfer Tool .....	32-68
32.11	Restrictions .....	32-70
32.11.1	Transfer Restrictions .....	32-70
32.11.2	Restrictions for Transfer Using Ethernet .....	32-70
32.11.3	Restrictions on Transfer Using a COM Port .....	32-71
32.11.4	Restrictions on CF Card Connection .....	32-71
32.11.5	Restrictions on Modem Transfer .....	32-71
32.11.6	Restrictions on Memory Loader .....	32-72

## Chapter 33 Print

---

33.1	Settings Menu .....	33-2
33.2	Printing the Project Settings .....	33-4
33.2.1	Detail .....	33-4
33.2.2	Setup Procedure .....	33-5
33.2.3	Print Layout .....	33-8
33.3	Printing GP data .....	33-9
33.3.1	Details .....	33-9
33.3.2	Printer Setup Procedure .....	33-14
33.4	Printing the Current Screen .....	33-20
33.4.1	Details .....	33-20
33.4.2	Operation Method .....	33-21
33.4.3	Setup Procedure .....	33-23
33.5	Cancel Printing .....	33-30
33.5.1	Details .....	33-30
33.5.2	How to Cancel Printing .....	33-31
33.5.3	Setup Procedure .....	33-33
33.6	Settings Guide .....	33-40
33.6.1	Print Settings Guide .....	33-40

33.6.2	System Settings [Printer] Settings Guide .....	33-55
33.7	Restrictions .....	33-60
33.7.1	Restrictions for Printing from the GP .....	33-60
33.7.2	Restrictions of GP Remote Printer Server .....	33-62

## Chapter 34 Adjusting the Time and Screen Saver

---

34.1	Settings Menu .....	34-2
34.2	Adjusting the Time .....	34-4
34.2.1	Detail .....	34-4
34.2.2	Setup Procedure .....	34-5
34.3	Using the Screen Saver .....	34-8
34.3.1	Turning off the Screen When Not in Use .....	34-8
34.3.2	Turning OFF the Screen from a Device/PLC .....	34-10
34.4	Restrictions .....	34-12
34.4.1	Restrictions for Adjusting the Clock .....	34-12
34.4.2	Restrictions for Turning OFF the Screen .....	34-12

## Chapter 35 Display or Operate a Computer from the GP

---

35.1	Action Environment .....	35-2
35.1.1	Summary .....	35-2
35.1.2	VNC Server .....	35-2
35.2	Settings Menu .....	35-3
35.3	Display/Operate the computer screen on the GP .....	35-4
35.3.1	Introduction .....	35-4
35.3.2	Procedure .....	35-6
35.3.3	Operating Procedure .....	35-22
35.4	Settings Guide .....	35-23
35.4.1	Remote PC Access Window Display Settings Guide .....	35-23
35.4.2	System Settings [Input Equipment Settings] - [Remote PC Access Input] Settings Guide .....	35-29
35.4.3	Remote PC Access Window Display Setting Guide .....	35-30
35.5	Restrictions .....	35-31
35.5.1	Remote PC Access Window Display Unit Restrictions .....	35-31
35.5.2	Remote PC Access Window Restrictions .....	35-32
35.5.3	Server Computer Connection Restrictions .....	35-33
35.5.4	RPA Popup Keypad Restrictions .....	35-34
35.5.5	USB Keyboard for RPA Restrictions .....	35-34
35.5.6	USB mouse for RPA Restrictions .....	35-35

## Chapter 36 Use the Computer to Display and Operate GP Data

---

36.1	What are GP-Viewer EX and Web Server? .....	36-2
------	---	------



36.1.1	GP-Viewer EX .....	36-3
36.1.2	Web Server .....	36-5
36.2	GP-Viewer EX Operation Environment and Development Flow .....	36-6
36.2.1	Target models .....	36-6
36.2.2	Development Process .....	36-13
36.3	Web Server Operation Environment and Development Flow .....	36-14
36.3.1	Target models .....	36-14
36.3.2	Supported Features .....	36-16
36.3.3	Development Process .....	36-17
36.4	Settings Menu .....	36-18
36.4.1	Setting Up GP-Viewer EX .....	36-18
36.4.2	Web Server Settings .....	36-19
36.5	Using GP-Viewer EX to Display and Operate with Data from Display Units .....	36-22
36.5.1	Introduction .....	36-22
36.5.2	Procedure .....	36-23
36.6	Restricting Access to GP-Viewer EX .....	36-30
36.6.1	Introduction .....	36-30
36.6.2	Procedure .....	36-31
36.7	Displaying Addresses on the Web Server and Changing Address Values .....	36-35
36.7.1	Introduction .....	36-35
36.7.2	Procedure .....	36-36
36.7.3	Operating Procedure .....	36-42
36.8	Displaying Alarm information on the Web Server .....	36-48
36.8.1	Introduction .....	36-48
36.8.2	Operating Procedure .....	36-49
36.9	Displaying Alarm Information as RSS Data on the Web Server .....	36-50
36.9.1	Introduction .....	36-50
36.9.2	Setup Procedure .....	36-51
36.10	Using the Web Server to Transfer Files to the CF Card or USB Storage .....	36-53
36.10.1	Introduction .....	36-53
36.10.2	Setup Procedure .....	36-54
36.10.3	Operating Procedure .....	36-58
36.11	Restricting Access to the Web Server .....	36-60
36.11.1	Introduction .....	36-60
36.11.2	Setup Procedure .....	36-61
36.11.3	Operating Procedure .....	36-66
36.12	Settings Guide .....	36-67
36.12.1	Standard Template HTML Setting Guide .....	36-67
36.12.2	System Settings [Display Unit] - [Remote Viewer] Settings Guide .....	36-74
36.13	Using Synchronous and Asynchronous Modes with GP-Viewer EX .....	36-78
36.13.1	Screen Mode .....	36-78
36.13.2	On GP-Viewer EX Startup .....	36-78
36.13.3	When Changing Screens .....	36-79

36.13.4	When Running Screen Operations .....	36-84
36.14	Restrictions .....	36-86
36.14.1	GP-Viewer EX Restrictions .....	36-86
36.14.2	Web Server Restrictions .....	36-87

## Chapter 37 WinGP (GP Operations on IPC Series)

---

37.1	WinGP Overview .....	37-2
37.1.1	What is WinGP? .....	37-2
37.1.2	Full Configuration .....	37-3
37.1.3	Differences between IPC and GP .....	37-4
37.2	Operation Environment .....	37-6
37.2.1	Supporting Models .....	37-6
37.2.2	Supported Protocols .....	37-7
37.2.3	Model Environment .....	37-9
37.2.4	Application Development Environment .....	37-9
37.3	Development Process .....	37-10
37.3.1	Development Process .....	37-10
37.3.2	Setup Procedure .....	37-11
37.4	Settings Menu .....	37-33
37.5	Retrieve WinGP information or Operate WinGP from user application .....	37-34
37.5.1	Introduction .....	37-34
37.5.2	Procedure .....	37-35
37.5.3	Samples of Read/Write data (device access API) .....	37-38
37.5.4	Sample to retrieve the WinGP status and change the settings (Handling API) ..	37-56
37.6	Running the Application from WinGP .....	37-71
37.6.1	Introduction .....	37-71
37.6.2	Switch Startup Settings .....	37-72
37.6.3	D-Script startup settings .....	37-75
37.7	Keep History of Error Messages Displayed in WinGP .....	37-77
37.7.1	Detail .....	37-77
37.7.2	Setup Procedure .....	37-78
37.8	API Function List .....	37-79
37.8.1	Handling API .....	37-79
37.8.2	Device Access API .....	37-89
37.9	Settings Guide .....	37-156
37.9.1	System Settings [Display Unit Settings] [IPC Settings] Settings Guide .....	37-156
37.9.2	Window Frame Settings Guide .....	37-164
37.9.3	ProjectCopy (Copy Tool) Settings Guide .....	37-166
37.10	Restrictions .....	37-167
37.10.1	Restrictions On Install .....	37-169
37.10.2	Restrictions on Window Frames .....	37-171
37.10.3	Restrictions on using Windows XP Embedded .....	37-173

37.10.4	Restriction on AP Communication .....	37-173
37.10.5	Transfer Restrictions .....	37-174
37.10.6	Restrictions on error logs .....	37-174

## Appendix

A.1	Communication .....	A-2
A.1.1	Settings Menu .....	A-2
A.1.2	Communicating with a Device/PLC Using the Direct Access Method .....	A-4
A.1.2.1	Details .....	A-4
A.1.3	Using the Memory Link Method with Unsupported Devices/PLCs .....	A-7
A.1.3.1	Details .....	A-7
A.1.4	LS Area (Direct Access Method) .....	A-9
A.1.4.1	LS Area List .....	A-9
A.1.4.2	System Data Area .....	A-11
A.1.4.3	Special Relay .....	A-23
A.1.4.4	Device/PLC System Data Area Allocation Procedure .....	A-26
A.1.5	System Area (Memory Link Area) .....	A-29
A.1.5.1	System Area List .....	A-29
A.1.5.2	System Data Area .....	A-31
A.1.5.3	Special Relay .....	A-39
A.1.6	Restrictions .....	A-42
A.1.6.1	GP Internal Device Restrictions .....	A-42
A.1.6.2	Special Relay Restrictions .....	A-42
A.1.6.3	Restrictions when Using Direct Access and Memory Link Together .....	A-43
A.1.6.4	Restrictions when Using the USR Area .....	A-46
A.2	Monitoring the Value of Device Addresses (Device monitor) .....	A-47
A.2.1	Detail .....	A-47
A.2.2	Setup Procedure .....	A-50
A.2.3	Operating Procedure .....	A-51
A.2.4	Restrictions .....	A-60
A.3	Executing Multiple Actions (Programs) with a Switch Operation .....	A-61
A.3.1	Trigger Action Parts Settings Guide .....	A-61
A.3.2	Triggered Action Restrictions .....	A-78
A.4	Drawing Using Other Languages .....	A-79
A.4.1	Details .....	A-79
A.4.2	Setup Procedure .....	A-80
A.5	Transferring Data Between a CF Card and a USB Memory Device .....	A-90
A.5.1	Detail .....	A-90
A.5.2	Setup Procedure .....	A-91
A.5.3	Operating Procedure .....	A-93
A.6	System Variables .....	A-96
A.6.1	Logic System Variables (#L System Variables) .....	A-97
A.6.2	HMI system variables (#H system variables) .....	A-116

## Chapter Using ST3000 Series

1.	Supported Models .....	1-2
----	------------------------	-----

---

2.	Pro-face® Software Compatibility .....	1-2
3.	Features Supported .....	1-3
4.	Differences with the GP .....	1-6