

## 31.9 Allocating I/O to EX modules on the LT Display

### 31.9.1 EX Module Display

Installing the EX modules allows for analog I/O and thermocouple input as well as the standard I/O shown below.

**IMPORTANT**

- Internal communication between the LT unit and EX module may experience a maximum delay of scan time + 10 milliseconds. Plus, since the EX module (hardware) also has a delay, to calculate the actual delay time for inputs and outputs, you need to also add the EX module delay time.

**NOTE**

- For more information on the installation process, see the following:  
 “31.8.3 Interface Specification” (page 31-63)

The details of the EX-modules are as follows.

Feature	Model	Summary	Browse to
Standard Input	EXM-DDI8DT	DIO Module: 8-input sink/source	 “■ DIO Input Module” (page 31-142)
	EXM-DDI16DT	DIO Module: 16-input sink./source	
Standard Output	EXM-DDO8UT	DIO module: 8-output sink	 “■ DIO Output Module” (page 31-142)
	EXM-DDO8TT	DIO module: 8-output source	
	EXM-DRA8RT	DIO module: 8-output relay	
	EXM-DDO16UK	DIO Module: 16-output sink	
	EXM-DDO16TK	DIO Module: 16-output source	
	EXM-DRA16RT	DIO Module: 16-output relay	
Standard IO	EXM-DMM8DRT	DIO Module: 4-input sink/source DIO Module: 4-output relay	 “■ DIO IO Module” (page 31-143)
Analog Input	EXM-AMI2HT	Analog Module: 2-input voltage/current	 “■ Analog Input Module” (page 31-143)
Analog Output	EXM-AMO1HT	Analog Module: 1-output voltage/current	 “■ Analog Output Module” (page 31-144)


Continued

Analog IO	EXM-AMM3HT	Analog Module: 2-input voltage/current Analog Module: 1-output voltage/current	 " ■ Analog I/O Module" (page 31-145)
	EXM-ALM3LT	Analog Module: 2-input thermocouple/ temperature Analog Module: 1-output voltage/current	 " ■ Temperature Input Module" (page 31-147)


## ■ Setup Procedure

Settings for the EX modules can be specified as follows.


- 1 In [System Settings], click [I/O Driver], and then click the [External Driver] tab.

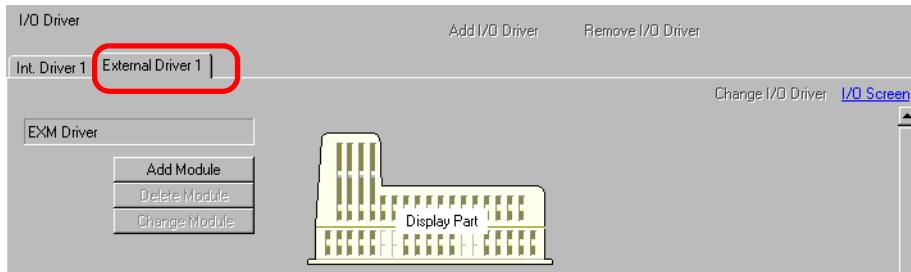


- 2 Click [Add Module] to display the [Module Details] dialog box. Specify the EX module type and click [OK].

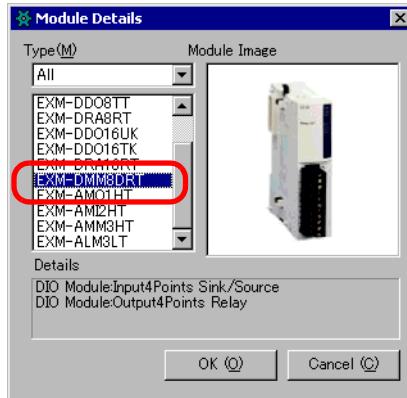

- 3 The module-specific settings appear. For details about each, see the Settings Guide.

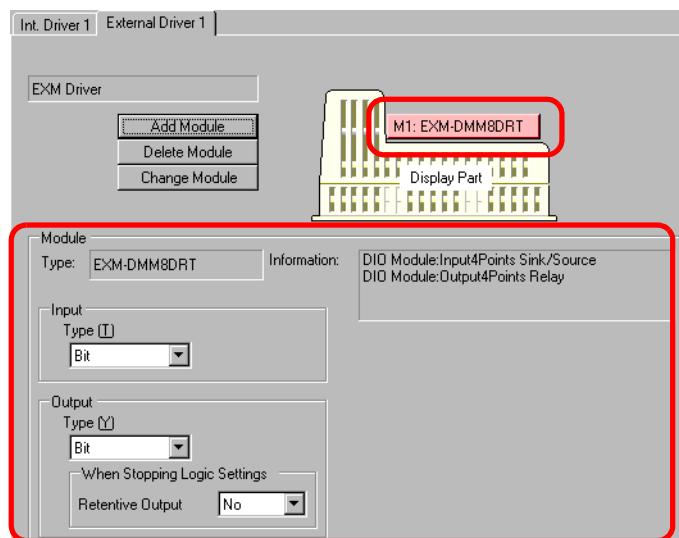


4 To add, change, and delete modules, click the module and the button shown below.

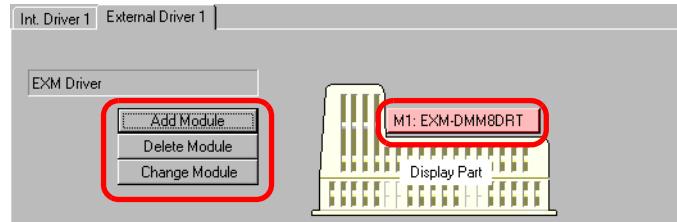


### 31.9.2 Settings Guide

#### ■ DIO Input Module

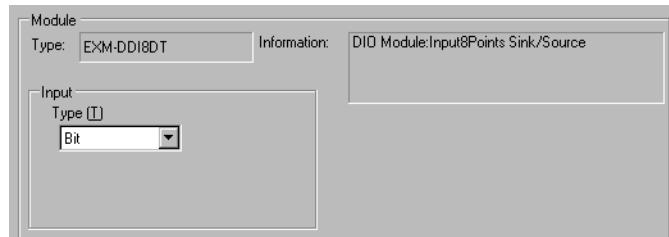


Setting	Description
Input	Configures settings for module input terminals.
Type	Select the variable type for the input from either [Bit] or [Word].

#### ■ DIO Output Module

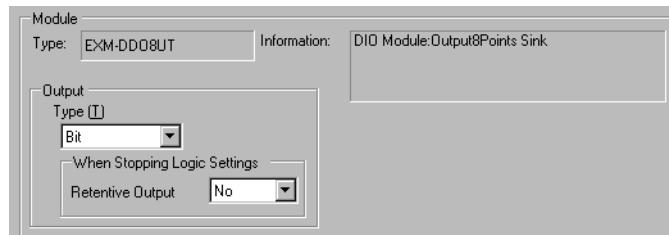


Setting	Description
Output	Configures settings for module output terminals.
Type	Select the variable type for the output from either [Bit] or [Word].
Retentive Output	Specifies whether or not to keep the output when the logic is off. Select [OK] to retain output values even if the logic stops.

## ■ DIO IO Module

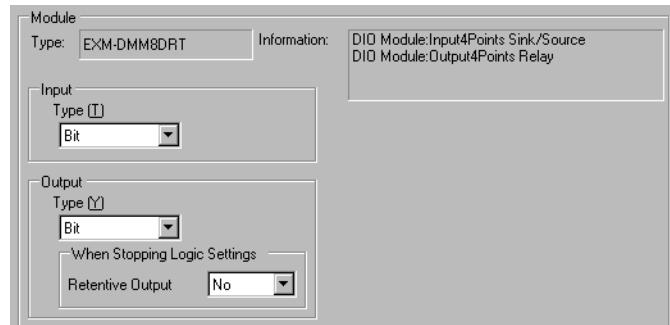

Setting	Description
Input	Configures settings for module input terminals.
Type	Select the variable type for the input from either [Bit] or [Word].
Output	Configures settings for module output terminals.
Type	Select the variable type for the output from either [Bit] or [Word].
Retentive Output	Specifies whether or not to keep the output when the logic is off. Select [OK] to retain output values even if the logic stops.

## ■ Analog Input Module

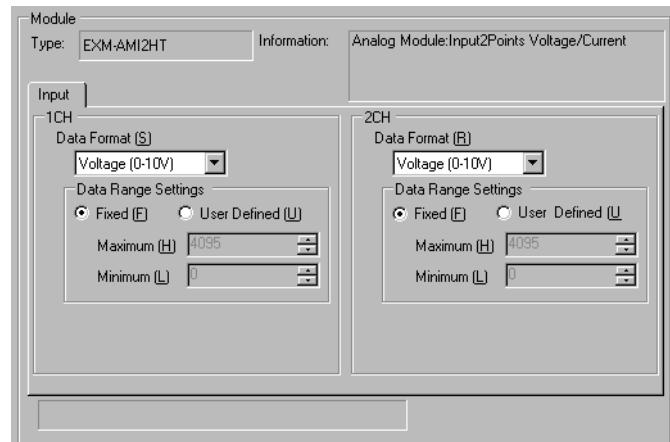


Setting	Description
Input (1CH, 2CH)	Configures settings for module analog input terminals.
Data Format	Select a data type from either [Voltage (0-10V)] or [Current (4-20mA)] for analog input.

Continued

Setting	Description												
Fixed	<p>The analog values in the voltage and current input settings appear in the range of 0 to 4095 as shown below.</p> <table border="1"> <caption>Data points for Fixed setting</caption> <thead> <tr> <th>Displayed Value</th> <th>Voltage (V)</th> <th>Current (mA)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1638</td> <td>5</td> <td>8</td> </tr> <tr> <td>4095</td> <td>10</td> <td>20</td> </tr> </tbody> </table>	Displayed Value	Voltage (V)	Current (mA)	0	0	0	1638	5	8	4095	10	20
Displayed Value	Voltage (V)	Current (mA)											
0	0	0											
1638	5	8											
4095	10	20											
User Defined (Maximum/Minimum)	<p>The analog values in the voltage and current input settings appear within the range of [Maximum] and [Minimum] settings. The available values are as follows.</p> <p>Maximum: minimum to 32767 Minimum: -32768 to maximum</p>												

## ■ Analog Output Module

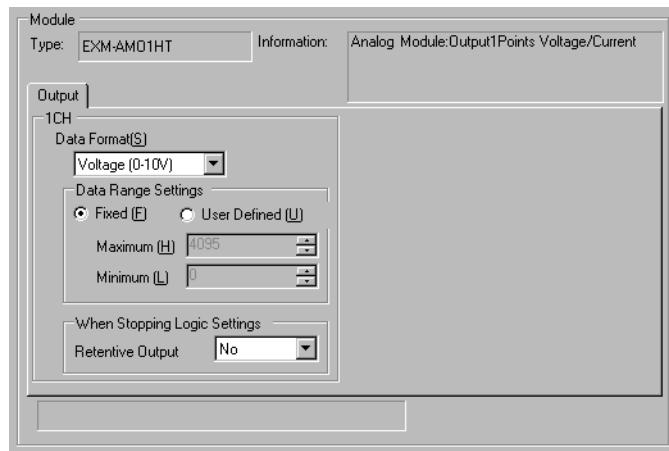


Setting	Description
Output (1CH)	Configures settings for module analog output terminals.
Data Format	Select a data type from either [Voltage (0-10V)] or [Current (4-20mA)] for analog output.

Continued

Setting	Description
Fixed	<p>The analog values in the voltage and current output settings appear in the range of 0 to 4095 as shown below.</p>
User Defined (Maximum/Minimum)	<p>The analog values in the voltage and current output settings appear within the range of [Maximum] and [Minimum] settings. The available values are as follows.</p> <p>Maximum: minimum to 32767 Minimum: -32768 to maximum</p>
Retentive Output	Specifies whether or not to keep the output when the logic is off. Select [OK] to retain output values even if the logic stops.

## ■ Analog I/O Module

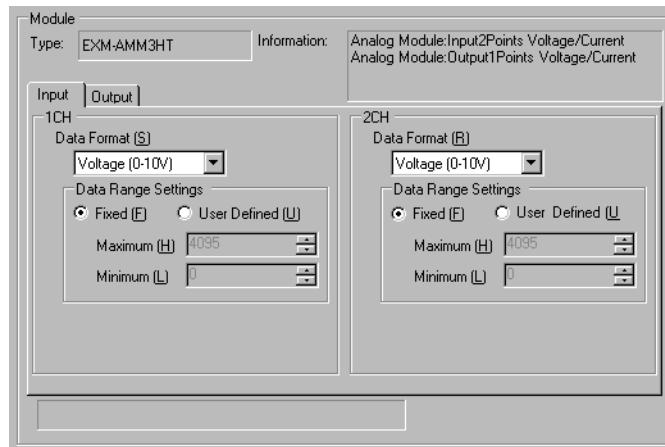




Setting	Description
Input (1CH, 2CH)	Configures settings for module analog input terminals.
Data Format	Select a data type from either [Voltage (0-10V)] or [Current (4-20mA)] for analog input.

Continued





Setting	Description
Fixed	<p>The analog values in the voltage and current input settings appear in the range of 0 to 4095 as shown below.</p>
User Defined (Maximum/Minimum)	<p>The analog values in the voltage and current input settings appear within the range of [Maximum] and [Minimum] settings.</p> <p>The available values are as follows.</p> <p>Maximum: minimum to 32767</p> <p>Minimum: -32768 to maximum</p>
Output (3CH)	Configures settings for module analog output terminals.
Data Format	Select a data type from either [Voltage (0-10V)] or [Current (4-20mA)] for analog output.
Fixed	<p>The analog values in the voltage and current output settings appear in the range of 0 to 4095 as shown below.</p>
User Defined (Maximum/Minimum)	<p>The analog values in the voltage and current output settings appear within the range of [Maximum] and [Minimum] settings.</p> <p>The available values are as follows.</p> <p>Maximum: minimum to 32767</p> <p>Minimum: -32768 to maximum</p>
Retentive Output	Specifies whether or not to keep the output when the logic is off. Select [OK] to retain output values even if the logic stops.

## ■ Temperature Input Module

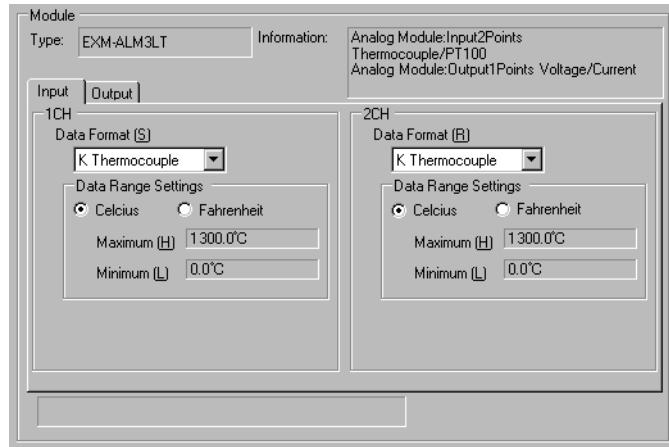

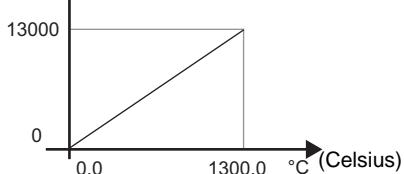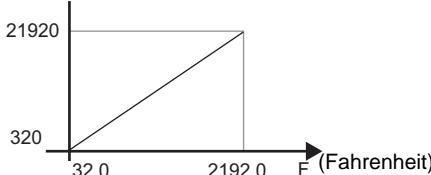Setting	Description
Input (1CH, 2CH)	Configures settings for module temperature input terminals.
Data Format	Select a data type for thermocouple input from below. <ul style="list-style-type: none"> <li>• K Thermocouple</li> <li>• J Thermocouple</li> <li>• T Thermocouple</li> <li>• Pt100</li> </ul>
K Thermocouple Celsius/ Fahrenheit	The K thermocouple temperature range is as follows. <ul style="list-style-type: none"> <li>• Celsius The displayed value is 10 times the input value ranging from 0.0°C to 1300.0°C (0 to 13000).</li> <li>• Fahrenheit The displayed value is 10 times the input value ranging from 32.0°F to 2372.0°F (320 to 23720).</li> </ul>  

Continued

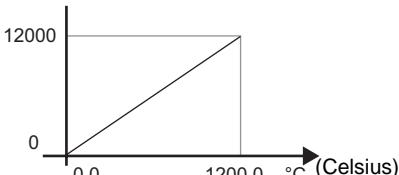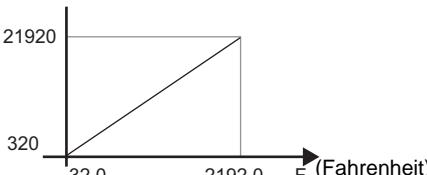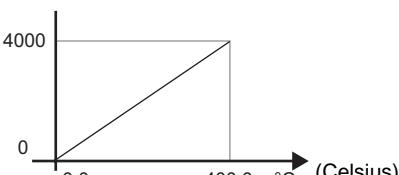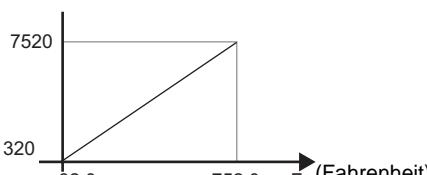Setting	Description
Input (1CH, 2CH) J Thermocouple Celsius/ Fahrenheit	<p>The J thermocouple temperature range is as follows.</p> <ul style="list-style-type: none"> <li>Celsius The displayed value is 10 times the input value ranging from 0.0°C to 1200.0°C (0 to 12000).</li> </ul>  <ul style="list-style-type: none"> <li>Fahrenheit The displayed value is 10 times the input value ranging from 32.0°F to 2192.0°F (320 to 21920).</li> </ul> 
T Thermocouple Celsius/ Fahrenheit	<p>The T thermocouple temperature range is as follows.</p> <ul style="list-style-type: none"> <li>Celsius The displayed value is 10 times the input value ranging from 0.0°C to 400.0°C (0 to 4000).</li> </ul>  <ul style="list-style-type: none"> <li>Fahrenheit The displayed value is 10 times the input value ranging from 32.0°F to 752.0°F (320 to 7520).</li> </ul> 

Continued

Setting	Description		
Input (1CH, 2CH)	<p>The Pt100 temperature range is as follows.</p> <ul style="list-style-type: none"> <li><b>Celsius</b> The displayed value is 10 times the input value ranging from <math>-100.0^{\circ}\text{C}</math> to <math>500.0^{\circ}\text{C}</math> (<math>-1000</math> to <math>5000</math>).</li> </ul> <ul style="list-style-type: none"> <li><b>Fahrenheit</b> The displayed value is 10 times the input value ranging from <math>-148.0^{\circ}\text{F}</math> to <math>932.0^{\circ}\text{F}</math> (<math>-1480</math> to <math>9320</math>).</li> </ul>		
Output (3CH)	Configures settings for module analog output terminals.		
Data Format	Select a data type from either [Voltage (0-10V)] or [Current (4-20mA)] for analog output.		
Fixed	<p>The analog values in the voltage and current output settings appear in the range of 0 to 4095 as shown below.</p> <table style="margin-left: auto; margin-right: auto;"> <tr> <td style="vertical-align: top;">Displayed value</td> <td style="text-align: center;"> </td> </tr> </table>	Displayed value	
Displayed value			
User Defined (Maximum/Minimum)	<p>The analog values in the voltage and current output settings appear within the range of [Maximum] and [Minimum] settings.</p> <p>The available values are as follows.</p> <p>Maximum: minimum to 32767 Minimum: <math>-32768</math> to maximum</p>		
Retentive Output	Specifies whether or not to keep the output when the logic is off. Select [OK] to retain output values even if the logic stops.		

### 31.9.3 Error information

The system variable #L\_IOStatus stores error information in the bottom 8 bits.

#L\_IOStatus

H	Module Number							
L	Major Fault    0    0    0    0    0    Setup    Compare    Error Code							
	Major Fault	0	0	0	0	Setup	Compare	Error Code

#### Compare

When the defined unit settings and actual connected unit's I/O settings are the same but the number of connection points is different, sets a value of 1.

#### Setup

When the defined unit settings and actual connected unit's I/O settings are different, sets a value of 1.

#### Major Fault

When an error is detected which requires the logic to stop, sets a value of 1.

## ■ Error code

	Error code	Error message	Summary	Solution
Project date related error	001	Module type error	Unsupported module type	The project file might not have been sent properly. Transfer the project file again.  Logic stop error
	002	Setting value error	The variable mapped to the terminal is incorrect. Invalid terminal settings	
	003	Device out-of-range error	The variable address allocated to the terminal is not correct.	
	004	Excess terminal settings	The number of terminals is not correct. (Too many terminals)	
	005	Terminal setting order error	The terminal no. is not in ascending order.	
	006	Terminal registry short	The number of terminals is not correct. (Too few terminals)	
	007	Module settings duplicated	The module is registered twice.	
	008	Excess module settings	The number of modules is not correct. (Too many modules)	
	009	Driver settings duplicated	The driver is registered twice.	
	010	I/O settings inconsistent	The terminal settings are not correct (Module I/O settings are not consistent).	

Continued

	Error code	Error message	Summary	Solution
Project date related error	011	Bit/Integer type inconsistent	The terminal settings are not correct (Module variable type settings are not consistent).	The project file might not have been sent properly. Transfer the project file again.  Logic stop error
	012	Setting level value error	The driver is not correct.	
	013	Data obtaining address error	The driver information is incorrect. The controller information is not correct.	
	014	Driver ID error	The driver/module registry results in an error and have not been registered.	
	015	Module setting order error	The module no. is not in ascending order.	
H/W related error	050	I/O board ID different	The connected I/O board is not correct.	The display type might not be correct. Check the display type and transfer the project file again.  Logic stop error
	051	Unsupported model error	The driver does not support the model.	
	052	I/O board initialization error	The I/O board initialization fails.	
Application related error	100	Module initialization error	Either the module is not connected correctly or it's broken	Module may not be connected correctly. Reconnect the module and turn the power on again. If this does not resolve the problem, the module itself may be broken. Please contact customer support  I/O update error
	101	Module initialization response error	Either the module is not connected correctly or it's broken	
	102	Module initialize send error	Either the module is not connected correctly or it's broken	
	103	Module initialize receive error	Either the module is not connected correctly or it's broken	
	104	Module initialization end error	Either the module is not connected correctly or it's broken	

Continued

	<b>Error code</b>	<b>Error message</b>	<b>Summary</b>	<b>Solution</b>
Application related error	105	Module connection count error	Too many connected modules	There are too many modules connected. Reduce the number of modules to an acceptable number then turn the power on again.
	106	Unsupported module	An unsupported module is connected	An unsupported module is connected. Remove the unsupported module then turn the power on again.
	107	Mode setup value error	Mode setup value error	I/O update error Project may not be transferred correctly to the display unit. Transfer the project again.
	108	Analog data range error	Analog module maximum/minimum value setup error	I/O update error The setup information in the project and the connected module are different. Connect the defined module and turn the power back on.
	109	Module setup error	When setup information and connected module do not match	I/O update error The setup information in the project and the connected module are different. Connect the defined module and turn the power back on.
	120	Module verification error	When the setup information and module do not match	I/O update error The module may not be connected properly. Reconnect the module and turn the power back on.
	121	Module response error	Either the module is not connected correctly or it's broken	I/O update error The module may not be connected properly. Reconnect the module and turn the power back on.
	122	Module send error	Either the module is not connected correctly or it's broken	I/O update error The module may not be connected properly. Reconnect the module and turn the power back on.
	123	Module receive error	Either the module is not connected correctly or it's broken	I/O update error The module may not be connected properly. Reconnect the module and turn the power back on.
	124	Module communication setup error	Communication data error	I/O update error The module may not be connected properly. Reconnect the module and turn the power back on.
	125	Module ACK error	Either the module is not connected correctly or it's broken	I/O update error The module may not be connected properly. Reconnect the module and turn the power back on.
	126	Module communication error	Either the module is not connected correctly or it's broken	I/O update error The module may not be connected properly. Reconnect the module and turn the power back on.

Continued

	Error code	Error message	Summary	Solution
Application related error	127	Analog output error	Writing analog output request flag is incomplete	I/O update continuous error Project may not be transferred correctly to the display unit. Transfer the project again. If the problem is still not solved, there may be a problem with the hardware. Contact your support center.
	128	Output data error	Analog output data range error	I/O update continuous error Output data is outside the setup range or output is stopped. Output data in the defined range.
	129	Analog external power error	Problem with the analog's external power supply	I/O update continuous error An external power supply is not powering the analog module. Connect power to the analog module.
	130	Input data error	Analog input data range error	I/O update continuous error Input data is outside the setup range or input is stopped. Input data in the defined range.
Internal error	200	Integer type data read error	Reading the integer type terminal data value failed.	I/O update continuous error The project file might not have been sent properly. Transfer the project file again.
	201	Bit type data read error	Reading the bit type terminal data value failed.	
	202	Integer type data write error	Writing the integer type terminal data value failed.	
	203	Bit type data write error	Writing the bit type terminal data value failed.	

### 31.9.4 Restrictions

---

- Power for the analog module should be separate from the LT unit's power supply. When turning the LT unit ON, first supply the module with power one second or more before you turn ON the LT unit. After turning power OFF, wait some time before powering on again to prevent malfunctions.